



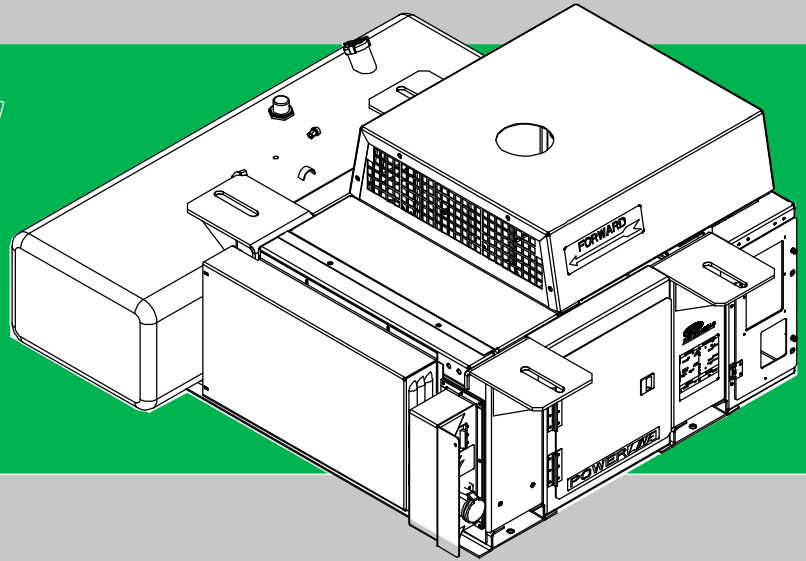

Diesel Generator Set

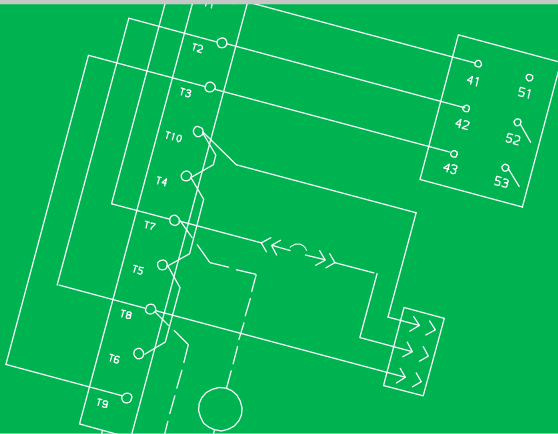

OPERATION & SERVICE

for

69UG15

Generator Set Units

PID UG1024 to UG1226



TRANSICOLD

**OPERATION AND SERVICE MANUAL
DIESEL DRIVEN GENERATOR SET**

**MODEL
69UG15**

SAFETY SUMMARY

GENERAL SAFETY NOTICES

The following general safety notices supplement the specific warnings and cautions appearing elsewhere in this manual. They are recommended precautions that must be understood and applied during operation and maintenance of the equipment covered herein. The general safety notices are presented in the following three sections labeled: First Aid, Operating Precautions and Maintenance Precautions. A listing of the specific warnings and cautions appearing elsewhere in the manual follows the general safety notices.

FIRST AID

An injury, no matter how slight, should never go unattended. Always obtain first aid or medical attention immediately.

OPERATING PRECAUTIONS

Always wear safety glasses and hearing protection.

Keep hands, clothing and tools clear of the radiator fan and rotating belts.

No work should be performed on the unit until all circuit breakers and start-stop switches are turned off and the negative battery terminal has been disconnected..

Always work in pairs. Never work on the equipment alone.

In case of severe vibration or unusual noise, stop the unit and investigate.

MAINTENANCE PRECAUTIONS

Be sure power is turned off and the negative battery cable is disconnected before working on generator set.

Do not bypass any electrical safety devices, e.g. bridging an overload, or using any sort of jumper wires. Problems with the system should be diagnosed, and any necessary repairs performed, by qualified service personnel.

In case of electrical fire, open circuit switch and extinguish with CO₂ (never use water).

Fuel Tanks present explosion, fire and rupture hazards even if liquid fuel has been drained. Do not attempt any repairs, especially repairs using flame, welder or torch, unless you have been properly trained and the tank has been emptied of liquid fuel and fuel vapors and the tank is properly ventilated.

UNIT HAZARD LABEL IDENTIFICATION

To help identify the hazard labels on the Unit and explain the level of awareness each one carries, explanations with appropriate consequences are provided below:



Indicates an immediate hazard which WILL result in severe personal injury or death.



Indicates hazards or unsafe conditions which COULD result in severe personal injury or death.



Indicates potential hazards or unsafe practices which COULD result in minor personal injury, product or property damage.

SPECIFIC WARNING AND CAUTION STATEMENTS

The statements that follow are applicable to the generator set and appear elsewhere in this manual. These recommended precautions must be understood and applied during operation and maintenance of the equipment covered herein.

WARNING

Beware of moving V-belt, belt driven components and hot exhaust components.

WARNING

Under no circumstances should ether or any other unauthorized starting aids be used in conjunction with the glow plugs.

WARNING

Beware of moving V-Belt and belt driven components.

WARNING

Beware of pinch points.

WARNING

Do not use gasoline to clean air cleaner parts.

WARNING

Do not direct water or steam into the generator openings. Do not allow any soap and water solutions to enter the alternator.

WARNING

High voltage (dielectric) testing must not be performed to the machine without first observing NEMA rules. The insulation of this generator winding may be safely checked by using a megger. A high megger reading indicates good insulation.

CAUTION

Observe proper polarity when installing the battery or connecting a battery charger, the negative battery terminal must be grounded. Reverse polarity may damage the charging system. When charging the battery in unit, isolate the battery by disconnecting the negative battery terminal first, then the positive. Once the battery has been charged, connect the positive battery terminal first, then the negative.

CAUTION

Never pour cold water into a hot engine.

CAUTION

Use only ethylene glycol, anti-freeze (with inhibitors) in system as glycol by itself will damage the cooling system.

CAUTION

Never open the radiator cap when the coolant is hot.

CAUTION

Always cover the engine inlet tube while the air cleaner is being serviced.

CAUTION

Do not underfill or overfill oil bath cups. Overfilling cups causes loss of capacity and underfilling cups causes lack of filtering efficiency.

CAUTION

Continued operation with failed shockmounts may result in engine or generator damage.

CAUTION

The rotor should not be pulled out from the alternator more than 0.75 inches. Damage to the bearing and windings may result.

TABLE OF CONTENTS

PARAGRAPH NUMBER	Page
SAFETY SUMMARY	Safety-i
GENERAL SAFETY NOTICES	Safety-i
FIRST AID	Safety-i
OPERATING PRECAUTIONS	Safety-i
MAINTENANCE PRECAUTIONS	Safety-i
UNIT LABEL IDENTIFICATION	Safety-i
SPECIFIC WARNING AND CAUTION STATEMENTS	Safety-i
DESCRIPTION	1-1
1.1 INTRODUCTION	1-1
1.2 CONFIGURATION IDENTIFICATION	1-1
1.3 ENGINE	1-6
1.3.1 Engine Air System	1-6
1.3.2 Lube Oil Filter Arrangement	1-6
1.3.3 Fuel System	1-6
1.4 ENGINE SCREW THREADS	1-6
1.5 ALTERNATING CURRENT GENERATOR	1-6
1.5.1 Principle of Operation	1-6
1.5.2 Alternating Current Generator Diagram	1-6
1.6 BATTERY CHARGING - SOLID STATE SYSTEM	1-7
1.7 OPERATING CONTROLS AND INSTRUMENTS	1-7
1.7.1 Introduction	1-7
1.7.2 Control Panel and Related Components	1-7
1.8 SAFETY DEVICES	1-8
1.9 UNIT SPECIFICATIONS	1-12
1.10 ENGINE DATA	1-12
OPERATION	2-1
2.1 GENERATOR SET INSTALLATION	2-1
2.2 GENERATOR SET REMOVAL	2-2
2.3 STARTING AND STOPPING INSTRUCTIONS	2-3
2.3.1 Pre-Start Inspection	2-3
2.3.2 Starting Instructions	2-3
2.3.3 Post-Start Inspection	2-3
2.3.4 Stopping Instructions	2-3
2.4 CONTROL CIRCUIT OPERATION	2-4
2.4.1 Sequence Of Operation	2-4
TROUBLESHOOTING	3-1
3.1 DIESEL ENGINE	3-1
3.1.1 Engine Will Not Start	3-1
3.1.2 Engine Starts Then Stops	3-1
3.1.3 Engine Will Not Shut Off	3-1
3.1.4 Starter Motor Malfunction	3-2
3.1.5 Malfunction In The Engine Starting Circuit	3-2
3.1.6 Miscellaneous Engine Troubleshooting	3-2
3.2 BATTERY CHARGER (SOLID STATE)	3-3
3.3 ALTERNATING CURRENT GENERATOR	3-4

TABLE OF CONTENTS - Continued

PARAGRAPH NUMBER	Page
SERVICE AND PREVENTIVE MAINTENANCE	4-1
4.1 INTRODUCTION	4-1
4.2 PREVENTIVE MAINTENANCE SCHEDULE	4-1
4.3 BATTERY SERVICE	4-1
4.4 ENGINE SERVICE AND COMPONENTS	4-1
4.4.1 Priming the Fuel System	4-1
4.4.2 Servicing Fuel Pump Internal Filter	4-1
4.4.3 Fuel Filter	4-1
4.4.4 Cooling System	4-1
4.4.5 Servicing the Low Coolant Sensor	4-4
4.4.6 Servicing and Adjusting V-belt	4-4
4.4.7 Lube Oil Filter	4-4
4.4.8 Adjusting Engine Speed	4-5
4.4.9 Servicing the Engine Speed Sensor	4-5
4.4.10 Engine Air Cleaner	4-5
4.4.11 Engine Crankcase Breather	4-6
4.4.12 Servicing Glow Plugs	4-6
4.5 SERVICING THE ALTERNATING CURRENT GENERATOR	4-6
4.5.1 Preventive Maintenance and Operating Precautions	4-6
4.5.2 Generator Repair/Test Procedures	4-7
4.5.3 Bearing Replacement	4-8
4.5.4 Generator Installation and Removal	4-8
4.6 GENERAL GENERATOR SET MAINTENANCE	4-9
4.6.1 Maintenance Of Painted Surfaces	4-9
4.6.2 Check and Replace Isolators/ Shockmounts	4-10
4.7 UNIDRIVE TORQUE REQUIREMENTS	4-11
SCHEMATICS	5-1
5.1 INTRODUCTION	5-1

LIST OF ILLUSTRATIONS

FIGURE NUMBER	Page
Figure 1-1. Typical Generator Set - Control Box (Road) Side	1-4
Figure 1-2. Typical Generator Set - Top View with Top Frame Members Removed for Clarity	1-5
Figure 1-3. Fuel System Diagram	1-6
Figure 1-4. Lube Oil	1-6
Figure 1-5. A-C Generator Circuit Diagram	1-7
Figure 1-6. Standard Control Box and Panel	1-8
Figure 1-7. Auto Restart Control Box and Panel	1-9
Figure 1-8. Customer Specific Control Box and Panel	1-9
Figure 2-1. Typical Generator Set Mounting - Standard Mount	2-1
Figure 2-2. Typical Generator Set Mounting - Quick Mount	2-2
Figure 4-1. Mechanical Fuel Pump	4-1
Figure 4-2. Low Coolant Sensor	4-4
Figure 4-3. Engine Speed Adjustment	4-5
Figure 4-4. Air Filter (Dry Element Type)	4-5
Figure 4-5. Air Filter (Oil Bath Type)	4-6
Figure 4-6. Engine Crankcase Breather	4-6
Figure 4-7. Rectifier Removal	4-8
Figure 4-8. A-C Generator Rectifier Assembly	4-8
Figure 4-9. Truss and Isolator	4-9
Figure 4-10. Engine Shockmounts	4-10
Figure 4-11. Generator Shockmounts	4-10
Figure 4-12. Unidrive Torque Requirements	4-11
Figure 5-1. Schematic Diagram - Legend	5-1
Figure 5-2. Schematic Diagram	5-2
Figure 5-3. Schematic Diagram 460 Volt Alternating Current Generator	5-3
Figure 5-4. Schematic Diagram 230 Volt Alternating Current Generator	5-4
Figure 5-5. Schematic Diagram - Legend	5-5
Figure 5-6. Schematic Diagram	5-6
Figure 5-7. Schematic Diagram 460 Volt Alternating Current Generator	5-7

LIST OF TABLES

TABLE NUMBER	Page
Table 1-1. Model Chart	1-2
Table 1-2. Auto Restart Preset Values	1-10
Table 1-3. Auto Restart Sequencing	1-10
Table 1-4. Safety Devices	1-12
Table 4-1 Preventative Maintenance Actions and Schedule	4-2

SECTION 1

DESCRIPTION

1.1 INTRODUCTION

The Carrier Transicold model 69UG15 under-mounted diesel-driven generator sets serve to provide electrical power for all-electric refrigeration units.

The generator set (see Figure 1-1 and Figure 1-2) consists of a diesel engine direct-connected to an alternating current generator and mounted in a structural steel frame. The engine is a vertical in-line, four cylinder diesel manufactured by Kubota, while the generator is a 15 kW, brushless, single bearing type manufactured by Lima. The generator provides a constant 460 or 230 VAC, three-phase, 60 hertz electrical supply.

Electrical controls are mounted in a control box with operating controls and gauges mounted on a control panel, which also serves as the control box cover. The control panel components are protected by a deflector assembly or a windowed control box door.

Auxiliary engine equipment consists of the battery, battery charging system (alternator or solid state), glow plugs (used as a starting aid), "spin-on" lube oil and fuel filters (for easier filter changes), and other necessary components for proper unit operation. The water pump and the radiator cooling fan are belt-driven from the engine crankshaft. All references to engine are as viewed from the fly wheel end.

The 69UG15 is available in either a standard configuration or with auto restart, a feature that automatically restarts the unit in the event of a shutdown. Auto restart also offers built-in indicators that signal low oil pressure, high water temperature, overspeed, and other overcrank conditions.

1.2 CONFIGURATION IDENTIFICATION

Generator set identification information is provided on a label located on the frame panel inside the engine inspection door. The label provides the generator set model number, serial number, and parts identification number (PID). The model number identifies the overall configuration, while the PID provides information on specific optional equipment and differences in detailed parts.

Separately bound manuals covering the diesel engine are also available (see the following chart). Note, all referenced engines have been assembled using the two-piece oil pan.

Manual/Form No.	Equipment Covered	Type of Manual
62-10863	V2203-DI	Engine Parts List
62-10865	V2203-DI	Workshop

Table 1-1. Model Chart

LEGEND

- | | |
|--|--|
| A1 - Standard Mount - (See Figure 2-1) | C1 - 460 Volt - Standard |
| A2 - Quick Mount - (See Figure 2-2) | C2 - 460 Volt - with Auto-Restart/Low Coolant Sensor |
| B1 - Receptacle Box - with Circuit Breaker | C3 - 460 Volt - Customer Specific |
| B2 - Receptacle Box - with Interlock | |


Model	PID	Electrical Wiring Schematic and Diagram Figures	Unit Mounting	Receptacle Box	Control Box
69UG15-050S-01	UG1024	5-1, 5-2, 5-3, 5-4	A1	B1	C1
	UG1034	5-1, 5-2, 5-3, 5-4	A1	B1	C1
	UG1115	5-1, 5-2, 5-3, 5-4	A1	B1	C1
	UG1116	5-1, 5-2, 5-3, 5-4	A1	B1	C1
	UG1146	5-1, 5-2, 5-3, 5-4	A1	B1	C1
	UG1153	5-1, 5-2, 5-3, 5-4	A1	B1	C1
	UG1156	5-1, 5-2, 5-3, 5-4	A1	B1	C1
	UG1178	5-1, 5-2, 5-3, 5-4	A1	B1	C1
	UG1179	5-1, 5-2, 5-3, 5-4	A1	B1	C1
	UG1201	5-1, 5-2, 5-3, 5-4	A1	B1	C1
	UG1202	5-1, 5-2, 5-3, 5-4	A1	B1	C1
	UG1203	5-1, 5-2, 5-3, 5-4	A1	B1	C1
	UG1205	5-1, 5-2, 5-3, 5-4	A1	B1	C1
	UG1220	5-1, 5-2, 5-3, 5-4	A1	B1	C1
	UG1221	5-1, 5-2, 5-3, 5-4	A1	B1	C1
UG1222	5-1, 5-2, 5-3, 5-4	A1	B1	C1	
69UG15-050S-02	UG1150	5-1, 5-2, 5-3, 5-4	A1	B1	C1
	UG1206	5-1, 5-2, 5-3, 5-4	A1	B1	C1
	UG1207	5-1, 5-2, 5-3, 5-4	A1	B1	C1
69UG15-050S-03	UG1158	5-5, 5-6, 5-7	A1	B2	C2
	UG1208	5-5, 5-6, 5-7	A1	B2	C2
69UG15-050S-04	UG1174	5-1, 5-2, 5-3, 5-4	A1	B1	C1
	UG1209	5-1, 5-2, 5-3, 5-4	A1	B1	C3
	UG1223	5-1, 5-2, 5-3, 5-4	A1	B1	C3
69UG15-050S-05	UG1226	5-1, 5-2, 5-3, 5-4	A1	B1	C3
69UG15-050Q-02	UG1117	5-1, 5-2, 5-3, 5-4	A1	B1	C1
	UG1120	5-1, 5-2, 5-3, 5-4	A2	B1	C1
	UG1151	5-1, 5-2, 5-3, 5-4	A2	B1	C1
	UG1210	5-1, 5-2, 5-3, 5-4	A2	B1	C1
	UG1211	5-1, 5-2, 5-3, 5-4	A2	B1	C1

Table 1-1. Model Chart (Continued)

A1 - Standard Mount - (See Figure 2-1)
 A2 - Quick Mount - (See Figure 2-2)
 B1 - Receptacle Box - with Circuit Breaker
 B2 - Receptacle Box - with Interlock


C1 - 460 Volt - Standard
 C2 - 460 Volt - with Auto-Restart/Low Coolant Sensor
 C3 - 460 Volt - Customer Specific

Model	PID	Electrical Wiring Schematic and Diagram Figures	Unit Mounting	Receptacle Box	Control Box
69UG15-068S-01	UG1122	5-1, 5-2, 5-3, 5-4	A1	B1	C1
	UG1123	5-1, 5-2, 5-3, 5-4	A1	B1	C1
	UG1124	5-1, 5-2, 5-3, 5-4	A1	B1	C1
	UG1125	5-1, 5-2, 5-3, 5-4	A1	B1	C1
	UG1126	5-1, 5-2, 5-3, 5-4	A1	B1	C1
	UG1127	5-1, 5-2, 5-3, 5-4	A1	B1	C1
	UG1154	5-1, 5-2, 5-3, 5-4	A1	B1	C1
	UG1155	5-1, 5-2, 5-3, 5-4	A1	B1	C1
	UG1212	5-1, 5-2, 5-3, 5-4	A1	B1	C1
	UG1213	5-1, 5-2, 5-3, 5-4	A1	B1	C1
	UG1215	5-1, 5-2, 5-3, 5-4	A1	B1	C1
	UG1224	5-1, 5-2, 5-3, 5-4	A1	B1	C1
UG1225	5-1, 5-2, 5-3, 5-4	A1	B1	C1	
69UG15-068Q-01	UG1129	5-1, 5-2, 5-3, 5-4	A2	B1	C1
	UG1216	5-1, 5-2, 5-3, 5-4	A2	B1	C1
69UG15-080S-01	UG1032	5-1, 5-2, 5-3, 5-4	A1	B1	C1
	UG1147	5-1, 5-2, 5-3, 5-4	A1	B1	C1
	UG1217	5-1, 5-2, 5-3, 5-4	A1	B1	C1
69UG15-080Q-01	UG1033	5-1, 5-2, 5-3, 5-4	A2	B1	C1
	UG1132	5-1, 5-2, 5-3, 5-4	A2	B1	C1
	UG1218	5-1, 5-2, 5-3, 5-4	A2	B1	C1
	UG1219	5-1, 5-2, 5-3, 5-4	A2	B1	C1

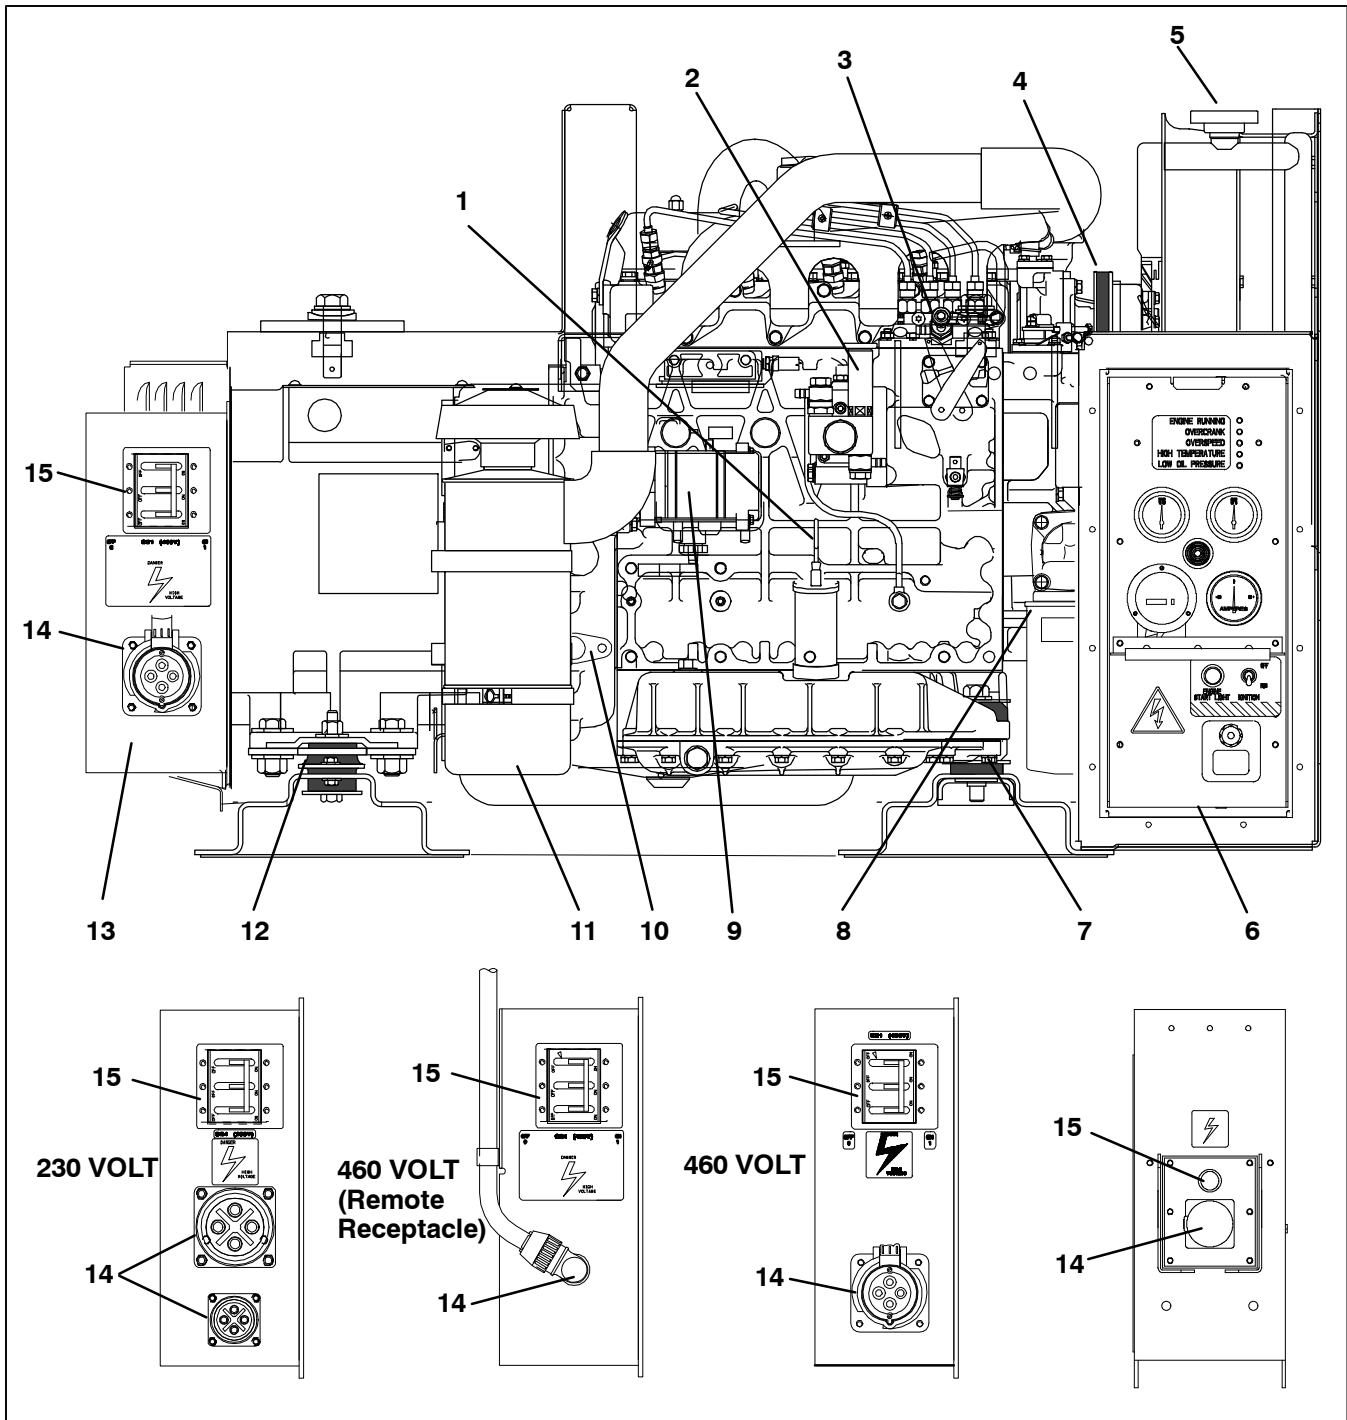

- | | |
|--|----------------------------------|
| 1. Lube Oil Dipstick/Fill Cap | 9. Starter |
| 2. Mechanical Fuel Pump | 10. Engine Speed Sensor |
| 3. Injector Pump | 11. Air Cleaner |
| 4. Poly V-Belt | 12. Generator Shockmount |
| 5. Radiator | 13. Receptacle Box |
| 6. Controls (See Figure 1-6 or Figure 1-7) | 14. Receptacle / Power Cord Exit |
| 7. Engine Shockmount (Typical) | 15. Circuit Breaker |
| 8. Engine Oil Filter | |

Figure 1-1. Typical Generator Set - Control Box (Road) Side

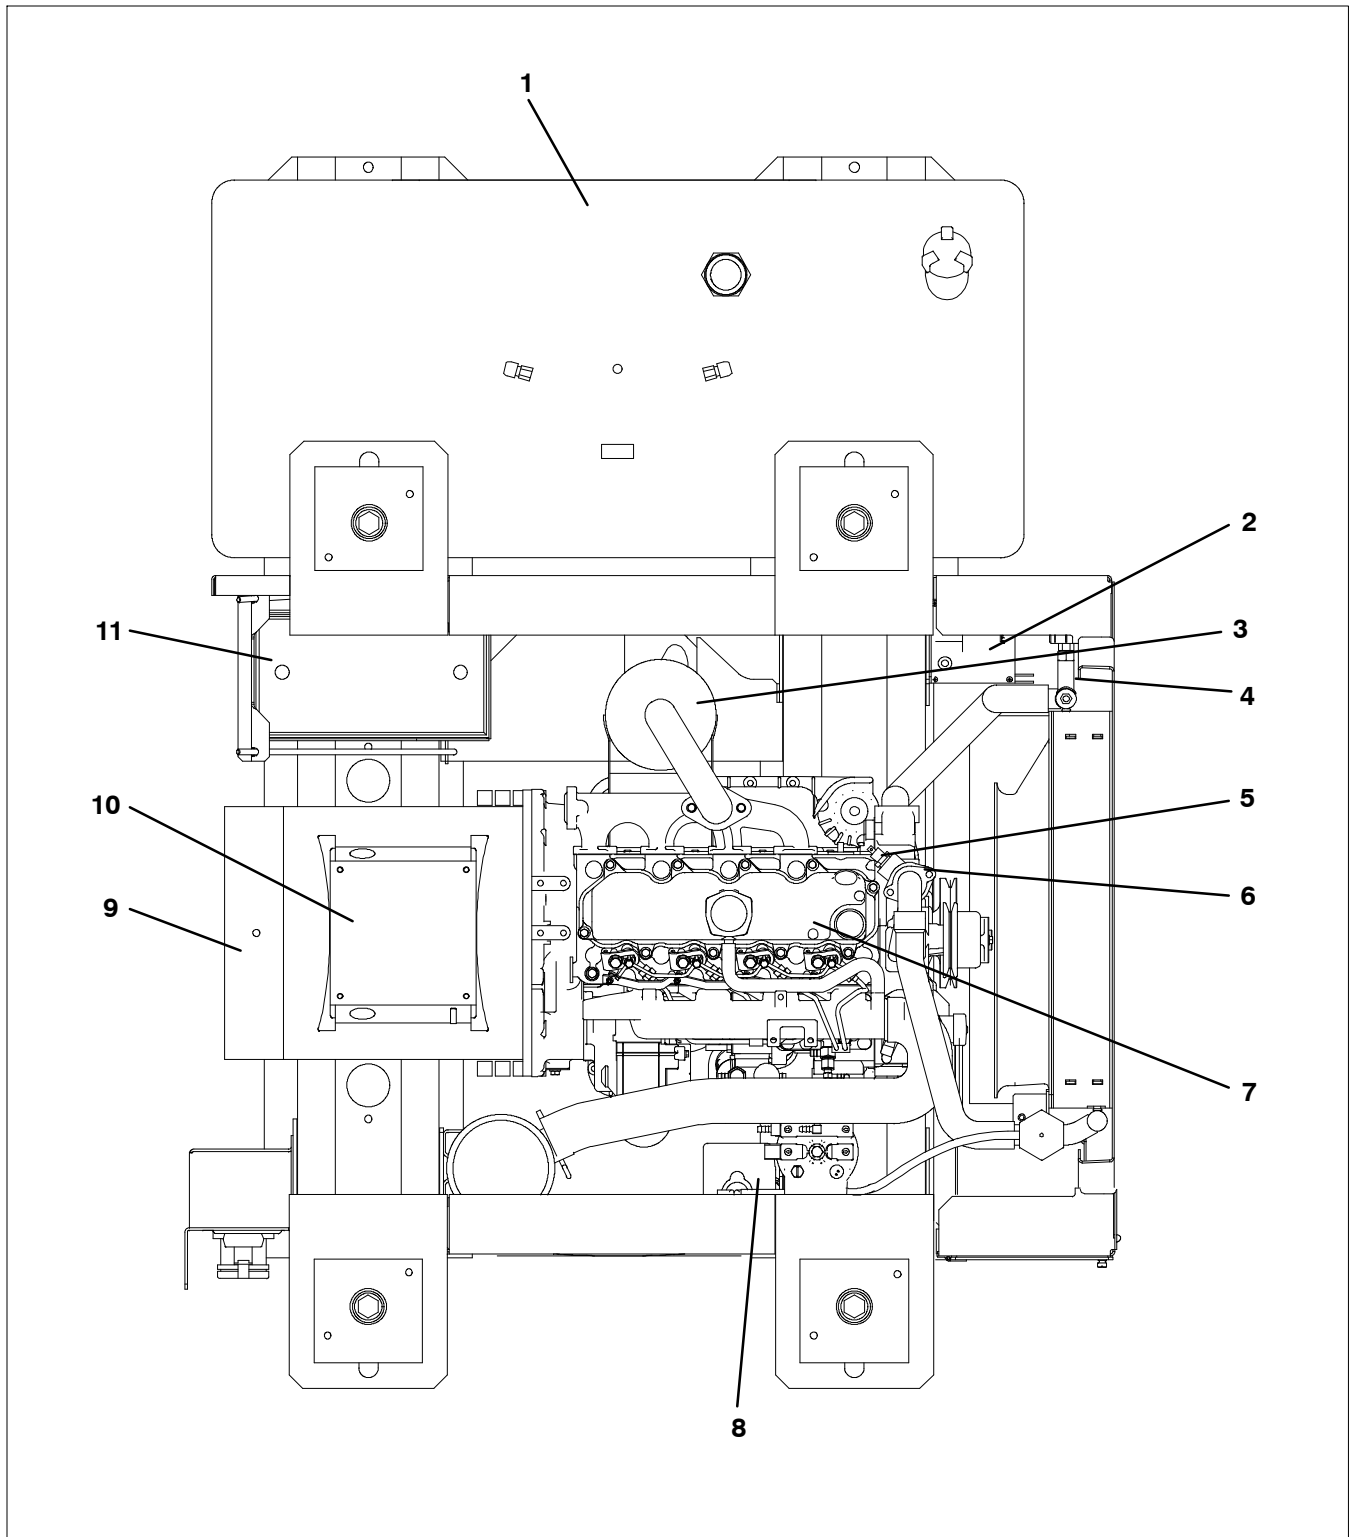

- | | |
|--|--|
| 1. Fuel Tank | 8. Coolant Overflow Bottle |
| 2. Solid State Battery Charger (If Equipped) | 9. Alternating Current Generator |
| 3. Exhaust Muffler | 10. AC Generator Connection Box Access |
| 4. Low Coolant Sensor (If Equipped) | 11. Battery |
| 5. Water Temperature Sensor | |
| 6. Water Temperature Switch | |
| 7. Engine | |

Figure 1-2. Typical Generator Set - Top View with Top Frame Members Removed for Clarity

1.3 ENGINE

The engine is a vertical, in-line four cylinder diesel, which is direct-connected to the alternating current generator. Information on the major engine systems is provided in the following subparagraphs.

1.3.1 Engine Air System

The air cleaner (Item 11, Figure 1-1) is designed to prolong engine life and performance by preventing dirt and grit from entering the engine and causing excessive wear on all operating parts. However, the operator is charged with the responsibility of providing the air cleaner equipment with regular maintenance in accordance with the instructions provided herein.

1.3.2 Lube Oil Filter Arrangement


The engine lubricating oil filter is mounted in a vertical arrangement and shown in Figure 1-4.

1.3.3 Fuel System

The fuel system is fitted with a filter, which also acts as a water separator. The filter is also be fitted with a heater. The fuel system is shown in Figure 1-3.

1.4 ENGINE SCREW THREADS

All threads used on the engine are metric with the exception of the oil drain plug, which is American Standard Pipe Thread (NPT).

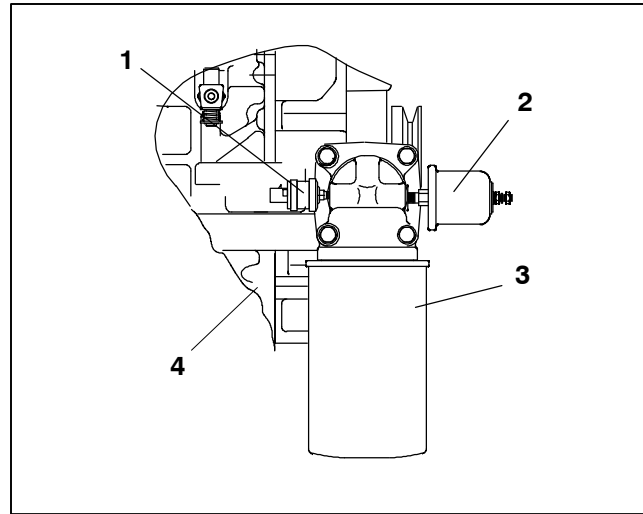

1. Oil Pressure Switch
2. Oil Pressure Sender
3. Oil Filter (Primary)
4. Oil Pan

Figure 1-4. Lube Oil

1.5 ALTERNATING CURRENT GENERATOR


1.5.1 Principle of Operation

The Marathon Alternator Company (Lima) brushless AC generator (see Figure 1-2, item 9) is a self-regulated, rotating field synchronous unit. The generator stator and exciter stator are combined in a common housing. The generator field, exciter rotor, and rotating rectifier assembly are mounted on a common shaft. The output of the exciter rotor is applied to the generator field winding through a rotating, full-wave bridge, silicon rectifier unit.

All connections between the exciter stator windings and the generator stator windings are internal within the stator housing. Only the output power leads are connected at the terminal box, which is located on top of the generator.

1.5.2 Alternating Current Generator Diagram

Figure 1-5 shows the internal schematic diagram of the generator, exciter, and rectifier unit. The generator is a three-phase unit, and the exciter stator and exciter rotor also have three-phase windings. A portion of the exciter stator windings is connected across a tap on the generator stator winding. This exciter shunt winding provides the generator field excitation power required for the generator no-load voltage. Another portion of the exciter stator windings is connected in series with the output of the generator and provides a compounding excitation characteristic.

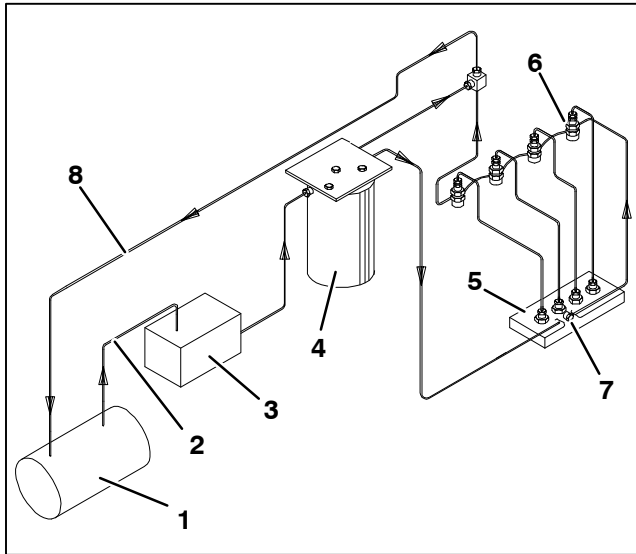

- | | |
|----------------------------------|---------------------|
| 1. Fuel Tank | 5. Injection Pump |
| 2. Fuel Supply Line | 6. Injector Nozzles |
| 3. Mechanical Fuel Pump (Engine) | 7. Fuel Bleed Valve |
| 4. Fuel Filter & Water Separator | 8. Fuel Return Line |

Figure 1-3. Fuel System Diagram

The rotor is, in effect, the secondary of a rotating current transformer induction frequency converter. The exciter rotor output voltage is applied to the generator field windings by a three-phase, full wave rotating silicon rectifier unit. The response time of the excitation system is very fast since the exciter stator carries an alternating current corresponding to the load current that appears immediately on the exciter primary. An increase in load current will cause an immediate increase in the exciter secondary output voltage, which is rectified and applied to the generator field windings. The inherent compounding characteristics of the excitation system provide excellent voltage regulation even under heavy overload conditions.

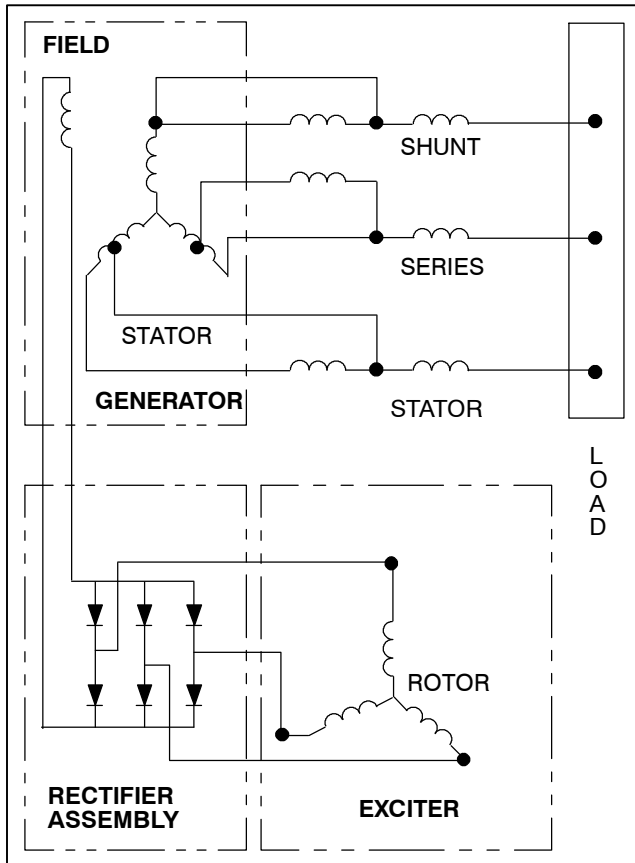


Figure 1-5. A-C Generator Circuit Diagram



CAUTION

Observe proper polarity when installing the battery or connecting a battery charger. The negative battery terminal must be grounded. Reverse polarity may damage the charging system. When charging the battery in unit, isolate the battery by disconnecting the negative battery terminal first, then the positive. Once the battery has been charged, connect the positive battery terminal first, then the negative.

1.6 BATTERY CHARGING - SOLID STATE SYSTEM

The solid state battery charger (see Figure 1-2) is located to the left of the radiator. The charger is powered by the generator, and this input is protected by a circuit breaker located on the control panel. The battery charger produces a tapered charge (25 amps maximum) and is designed not to overcharge the battery.

1.7 OPERATING CONTROLS AND INSTRUMENTS

1.7.1 Introduction

Components required for monitoring and controlling the unit are located in the control box, on the control panel (see Figure 1-6) and on the receptacle box (see Figure 1-1).

1.7.2 Control Panel and Related Components

a. Gauges and Senders

1. Oil Pressure Gauge (see Figure 1-6, Figure 1-7, Figure 1-8)

The purpose of this gauge is to observe normal operating engine oil pressure. Normal oil pressure is 35 to 60 psig (3.3 to 5.2 kg/cm²).

2. Oil Pressure Sender (see Figure 1-4)

This device senses engine lube oil pressure and transmits a signal to the oil pressure gauge. The oil pressure sender is located on the oil filter housing.

3. Water Temperature Gauge (see Figure 1-6, Figure 1-7, Figure 1-8)

The function of this gauge is to observe water operating temperature. The gauge is connected to the water temperature sender.

4. Water Temperature Sender (see Figure 1-2)

This device senses engine water temperature and transmits a signal to the water temperature gauge.

5. Low Coolant Sensor (see Figure 1-2)

This device senses the coolant level inside the radiator and will complete a conductive circuit as long as the probes remain immersed in coolant. When the coolant level falls below the probes, a signal will be sent to the auto restart module, shutting down the engine and all 12-volt circuitry.

6. Auto Restart Module (see Figure 1-7)

Auto start/restart is provided to simplify the start-up process and provide an automatic restart feature that will automatically attempt to restart the unit in the event of shutdown. Four LEDs are used to indicate shutdown from overcrank, overspeed, low oil pressure, and high water temperature. A fifth LED is used to indicate the unit is running. Refer to Table 1-2 for system preset values.

The auto restart function will perform a series of six attempts to restart the unit and make three attempts within each series. Once the function has completed all 18 attempts, the unit will automatically lock out future crank attempts. Refer to Table 1-3 for detailed information on auto restart sequencing.

b. Meters

1. Ammeter (A)

The ammeter (see Figure 1-6, Figure 1-7, Figure 1-8) indicates the rate of discharge or charge of the battery. It is an indicator of charging system function. The ammeter also provides information on glow plug condition. During operation, each plug draws approximately 7.5 amps.

2. Total Time Meter (TT)

This meter (see Figure 1-6, Figure 1-7, Figure 1-8) designates the total hours and provides an accurate readout of accumulated engine running time. This data can be used to establish the proper periodic maintenance schedule (refer to section 4.1).

c. Manual Switches

1. Glow Plug Switch (GPS) (see Figure 1-6)

The glow plug switch is of the momentary type, and when held in the PREHEAT position, permits battery current (approximately 30 amps) to flow to the glow plugs and preheat the combustion chambers. The glow plugs are located under the fuel injectors. When starting the engine, it is necessary to continue to hold the glow plug switch in the UP position until the engine has developed sufficient oil pressure to close the oil pressure safety switch.

2. Ignition Switch (IGN) (see Figure 1-6)

The ignition switch is of the momentary type in the START position. When held in the START (ignition) position, it energizes the starter motor solenoid, which in turn allows the starter motor to crank the engine. The

switch is released to the RUN position once the engine has started.

3. Ignition Switch (IGN)(Auto Restart) (see Figure 1-7)

The ignition switch is of the ON/OFF type. When switched to the RUN position, it energizes the control module, which in turn controls all functions of the gen-set.


1.8 SAFETY DEVICES

Safety devices, including circuit breakers, fuses, and safety switches protect system components from damage.

The AC generator battery charger and the glow plug circuit are protected by circuit breakers, which will open on excessive current draw to interrupt the component electrical circuit.

In units with auto restart, the engine, engine control devices, and engine monitoring devices are protected by the auto restart module, a low coolant sensor, a circuit breaker, a low oil pressure switch, and a high water temperature switch. These safety devices monitor system operating conditions and open a set of electrical contacts when an unsafe condition occurs. Opening one or more of these safety switch contacts will de-energize the fuel solenoid with the exception of the low coolant sensor, which will de-energize the entire 12-volt circuit.


De-energizing the fuel solenoid shuts off the fuel supply to the engine; thus stopping the engine. Safety device specifications are provided in Table 1-4.

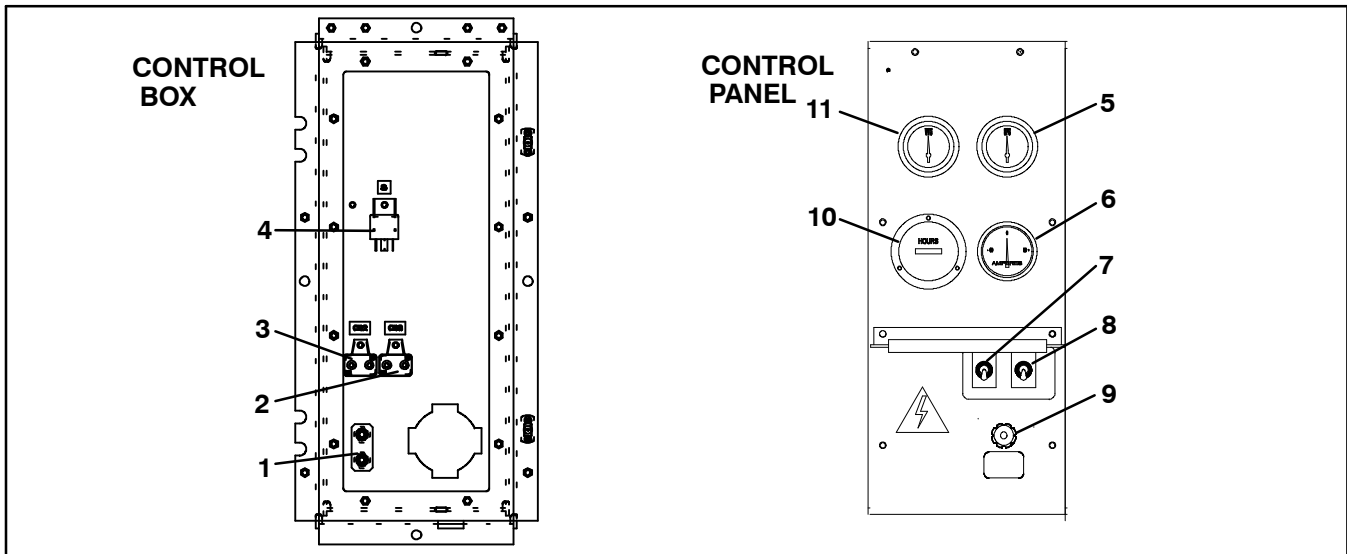

- 1. Ground Studs
- 2. Circuit Breaker (CB3)
- 3. Circuit Breaker (CB2)
- 4. Safety Relay
- 5. Oil Pressure Gauge
- 6. Ammeter


- 7. Glow Plug Switch
- 8. Ignition Switch
- 9. Battery Charger Fuse or Circuit Breaker (CB5)
- 10. Total Time Meter
- 11. Water Temperature Gauge

Figure 1-6. Standard Control Box and Panel

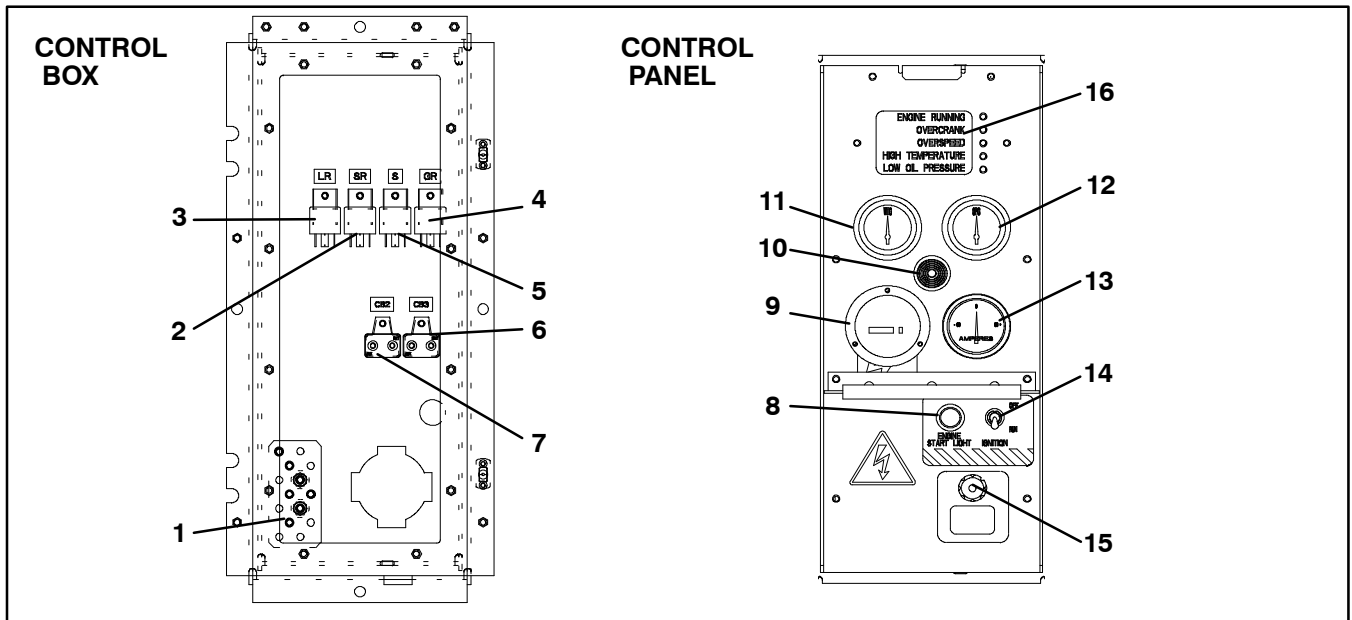

- | | |
|--|--|
| <ul style="list-style-type: none"> 1. Ground Studs 2. Starter Relay 3. Low Coolant Relay 4. Glow Plug Relay 5. Safety Relay 6. Circuit Breaker (CB3) 7. Circuit Breaker (CB2) 8. Engine Start Light 9. Total Time Meter | <ul style="list-style-type: none"> 10. Engine Start Alarm (Buzzer) 11. Water Temperature Gauge 12. Oil Pressure Gauge 13. Ammeter 14. Ignition Switch 15. Battery Charger Fuse or Circuit Breaker (CB5) 16. Auto Restart Module |
|--|--|

Figure 1-7. Auto Restart Control Box and Panel

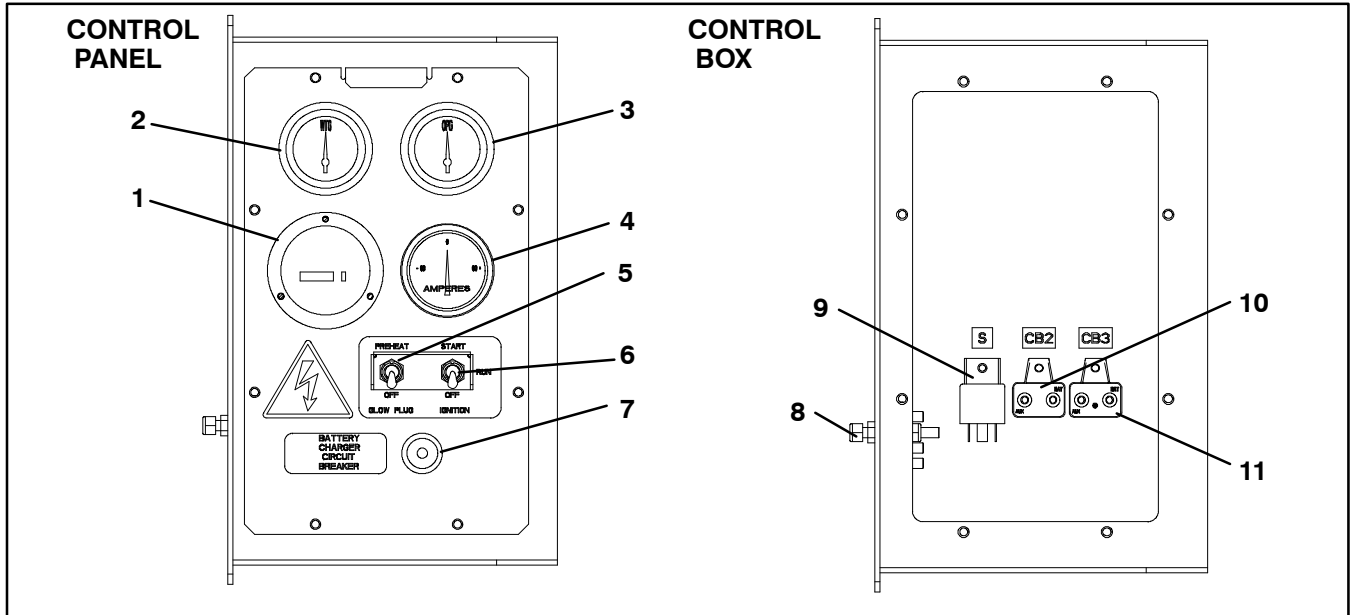

- | | |
|---|--|
| <ul style="list-style-type: none"> 1. Total Time Meter 2. Water Temperature Gauge 3. Oil Pressure Gauge 4. Ammeter 5. Glow Plug Switch 6. Ignition Switch | <ul style="list-style-type: none"> 7. Battery Charger Fuse or Circuit Breaker (CB5) 8. Ground Studs 9. Safety Relay 10. Circuit Breaker (CB2) 11. Circuit Breaker (CB3) |
|---|--|

Figure 1-8. Customer Specific Control Box and Panel

Table 1-2. Auto Restart Preset Values

Indicator	Preset Value	Description
Overspeed	2100 RPM	Overspeed is the point at which the unit will signal for shutdown
Crank Disconnect	700 RPM	Crank Disconnect is the point at which the auto restart module senses the engine has started and will disengage the starter
Shutdown Lockout Delay	15 seconds	The oil pressure and water temperature inputs are ignored during this 15 second delay (during startup)
Glow Plug Delay	20 seconds	The Glow Plug delay is used to energize the glow plug circuit. The Glow Plug delay begins timing after the auto restart module signal is received. During the entire delay, the glow plug circuit is energized and an audible alarm will sound. When the delay expires, the unit will crank.
Crank Attempts	18 attempts	A series of six attempts with three attempts in each series (total of 18 attempts)

Table 1-3. Auto Restart Sequencing

*Engine crank and rest is repeated three times each series unless the engine starts.

Series Attempt Number	Glow Plugs Energized in Seconds	Fuel Solenoid Engaged	Engine Crank Duration (Seconds)	Engine Rest Duration (Seconds)	Engine Status
1	20	X	Up To 15	25	<p>If the engine starts:</p> <ul style="list-style-type: none"> a. Run sequence begins. <p>If the engine fails to start:</p> <ul style="list-style-type: none"> a. Glow plugs will de-energize. b. Fuel solenoid will de-energize. c. Crank output will de-energize. d. Overcrank LED will flash once. Wait two seconds and repeat. e. Unit will rest 30 minutes and proceed to the next series.
2	20	X	Up To 15	25	<p>If the engine starts:</p> <ul style="list-style-type: none"> a. Glow plugs will de-energize. b. Run sequence begins. <p>If the engine fails to start:</p> <ul style="list-style-type: none"> a. Glow plugs will de-energize. b. Fuel solenoid will de-energize. c. Crank output will de-energize. d. Overcrank LED will flash twice. Wait two seconds and repeat. e. Unit will rest 30 minutes and proceed to the next series.

Table 1-3. Auto Restart Sequencing (Continued)

Series Attempt Number	Glow Plugs Energized in Seconds	Fuel Solenoid Engaged	Engine Crank Duration (Seconds)	Engine Rest Duration (Seconds)	Engine Status
3	20	X	Up To 15	25	<p>If the engine starts:</p> <ul style="list-style-type: none"> a. Glow plugs will de-energize. b. Run sequence begins. <p>If the engine fails to start:</p> <ul style="list-style-type: none"> a. Glow plugs will de-energize. b. Fuel solenoid will de-energize. c. Crank output will de-energize. d. Overcrank LED will flash three times. Wait two seconds and repeat. e. Unit will rest five hours and proceed to the next series.
4	20	X	Up To 15	25	<p>If the engine starts:</p> <ul style="list-style-type: none"> a. Glow plugs will de-energize. b. Run sequence begins. <p>If the engine fails to start:</p> <ul style="list-style-type: none"> a. Glow plugs will de-energize. b. Fuel solenoid will de-energize. c. Crank output will de-energize. d. Overcrank LED will flash four times. Wait two seconds and repeat. e. Unit will rest five hours and proceed to the next series.
5	20	X	Up To 15	25	<p>If the engine starts:</p> <ul style="list-style-type: none"> a. Glow plugs will de-energize. b. Run sequence begins. <p>If the engine fails to start:</p> <ul style="list-style-type: none"> a. Glow plugs will de-energize. b. Fuel solenoid will de-energize. c. Crank output will de-energize. d. Overcrank LED will flash five times. Wait two seconds and repeat. e. Unit will rest five hours and proceed to the next series.
6	20	X	Up To 15	25	<p>If the engine starts:</p> <ul style="list-style-type: none"> a. Glow plugs will de-energize. b. Run sequence begins. <p>If the engine fails to start:</p> <ul style="list-style-type: none"> a. Glow plugs will de-energize. b. Fuel solenoid will de-energize. c. Crank output will de-energize. d. Overcrank LED will illuminate solid and lock out future crank attempts. e. To reset, turn unit power switch OFF and back ON.

Table 1-4. Safety Devices

Unsafe Condition	Safety Switch	Switch Setting
ENGINE		
Low engine lubricating oil pressure	Low oil pressure switch (LOP) - Automatic reset	Opens below 15 psig (1.05 kg/cm ²)
High engine cooling water temperature	Water temperature switch (HWT) - Automatic reset	Opens at 230F (110C)
Low coolant	Low coolant sensor Automatic reset	Opens with a loss of 32 ounces of coolant
Excessive current draw by the fuel solenoid, fuel heater, water temperature gauge, oil pressure gauge or total time meter.	Circuit breaker (CB-2) - Automatic reset	Trips at 30 amps
GLOW PLUGS		
Excessive current draw on glow plug circuit.	Circuit breaker (CB-3) - Automatic reset	Opens at 50 amps
BATTERY CHARGER		
Excessive current draw on 230 volt feed circuit.	Circuit breaker (CB-5) - Automatic reset or fuse	Opens at 3 amps
GENERATOR		
Excessive current draw by load	Circuit breaker (CB-1, 460 volt) - Manual reset	Trips at 26 amps (460 VAC)
	Circuit breaker (CB-4, 230 volt) - Manual reset	Trips at 48 amps (230 VAC)

1.9 UNIT SPECIFICATIONS

	Nominal Tank Sizes	Fill Capacity	Draw Capacity
a. Fuel Tanks	50 Gallon (Integral) Steel	57.6 Gallon	50 Gallon*
	65 Gallon (Integral) Steel	67.5 Gallon	65 Gallon*
	80 Gallon (Integral) Aluminum	85 Gallon	80 Gallon*
	55 Gallon (Remote) Steel	-	50 Gallon
	55 Gallon (Remote) Aluminum	-	50 Gallon
	85 Gallon (Remote) Steel	-	80 Gallon

*Allows for DOT required 5% vapor space

b. Weights	Battery	52 lb (23.6 kg)
	Generator (A-C)	285 lb (129 kg)
	Engine (Dry) - without Accessories	418 lb (189.5 kg) Approximate
	Unit (with integral 50 gal tank, dry)	1570 lb (712 kg)
	Unit (with integral 65 gal tank, dry)	1585 lb (720 kg)
	Unit (with integral 80 gal tank, dry)	1500 lb (680 kg)

1.10 ENGINE DATA

a. Bore/Stroke	3.43 in. (87 mm) / 3.64 in. (92.4 mm)
b. Compression Ratio	20.5 : 1
c. Cylinders (Number)	Four
d. Displacement	134 cubic inches (2.2 liters)
e. Firing Order	1-3-4-2

1.10 ENGINE DATA (Continued)

f. Lubrication System	Oil Pressure Safety Switch Setting Opens	15 psig (2.08 kg/cm ²)		
	Capacity	Engine - 17.2 US quarts (16.3 liters) includes standard filter.		
	Oil Level Indicator	Dipstick in oil pan or fill cap NOTE To check oil level on engines with the dip stick mounted in the fill cap, remove the cap and wipe the dipstick clean. Insert the cap back onto the oil fill tube then remove to check level. It is not necessary to screw the cap back into the fill tube when checking level. DO NOT add oil if level is within the "safe" range. If needed, add oil to bring level within the "safe" range. Screw cap fully into fill tube after checking level.		
	Lube Oil Specification	Use a heavy duty lubricating oil conforming to American Petroleum Institute (API) Service Classification CG, CH or CI, Base Number 8 or above.		
	Lube Oil Viscosity	Outdoor Temperature		
		Fahrenheit	Centigrade	SAE
		Below -20F	Below -29C	0W, 5W or 5W20
		-20F to 32F	-29 to 0C	10W or 10W30
		32F to 77F	0 to 25C	20W or 15W40
	Over 77F	Over +25C	30W or 15W40	
g. Fuel and Fuel Heater Thermostat (FHT)	Winter		Summer	
	Diesel No. 1		Diesel No. 2	
	FHT			
	Close on temperature fall @ 45+/- 6.5F		Open on temperature rise @ 75+/- 6.5 F	
Power Consumption: 140-165 Watts @ 12-15.5 VDC				
h. Glow Plug Amperage	7.5 amps per plug at 12 VDC			
i. Horsepower	28 HP @ 1800 RPM at 3000 feet above sea level.			
	33 HP @ 1800 RPM at sea level.			
j. Cooling System	Capacity	6 U.S. quarts (5.68 liters) - includes 1 quart (0.95 liter) in coolant recovery bottle. (Refer to section 4.4.4)		
	Anti-Freeze: Conventional	The cooling system may be factory charged with a 50/50 mix of ethylene glycol and water. This mixture provides protection to -34F (-37C). For replacement, use a low silicate anti-freeze meeting GM specifications GM 6038M or equal. Again, a 50/50 mix is recommended.		
	Anti-Freeze: Extended Life	The cooling system may be factory charged with a 50/50 mix of extended life coolant (ELC) and deionized water. This mixture provides protection to -34F (-37C). For replacement, with extended life coolant (ELC) meeting GM specification GM6277M and deionized water. Again, a 50/50 mix is recommended. Extended life coolant is red or orange in color. DO NOT mix with conventional coolant.		
	Water Temperature Safety Switch Setting	Opens	230 +/- 5F (110 +/- 3C)	
		Resets	200F (93C) - minimum	
	Thermostat	Starts to open	177 to 182F (80 to 84C)	
		Fully open	203F (95C)	
Low Coolant Sensor	Opens	Loss of 32 ounces of coolant or more		
	Closes	Refilling of radiator to proper level		
k. Lubrication System	Oil Pressure	35 to 60 psig (3.3 to 5.2 kg/cm ²)		

SECTION 2

OPERATION

2.1 GENERATOR SET INSTALLATION

The generator set is mounted under the center of the trailer chassis and is easily handled with a fork lift truck capable of handling 2,000 pounds. The fork lift pockets provided are accessible from either side. Mounting clamps are designed to be attached to outside I-beam flanges only. Maximum chassis width is 38 inches on center.


a. Standard Mount

- 1 Loosen mounting bolts (see Figure 2-1) sufficient to push mounting plates to the outermost position
- 2 Place forks into fork lift pockets of generator set. Attach safety chain between unit and fork truck.
- 3 Center generator under chassis slide mounting plates fully onto chassis I-beams and torque mounting bolts to 80 - 90 ft-lbs (11.1 - 12.4 mkg). Upon completion, remove safety chain before removing forks of fork lift truck from unit.

4. If mounting a generator with power cable, secure power cable to chassis using tube clamps.
5. If fuel tank is remote, connect fuel lines.


b. Quick Mount

- 1 Loosen mounting bolts (see Figure 2-2) sufficient to bring clamp to open position. To orient in open position, lift nut end of bolt out of slot. Clamp will fall open.
- 2 Place forks into fork lift pockets of generator. Attach safety chain between unit and fork truck.
- 3 Center the generator set in desired position under chassis.
- 4 Lift clamp (item 1) in place ensuring bolt (item 4) is secured in slot.
- 5 Tighten bolt to 55 - 65 ft-lbs (7.6 - 9.0 mkg).
- 6 Upon completion, remove safety chain before removing forks of fork lift truck from unit.

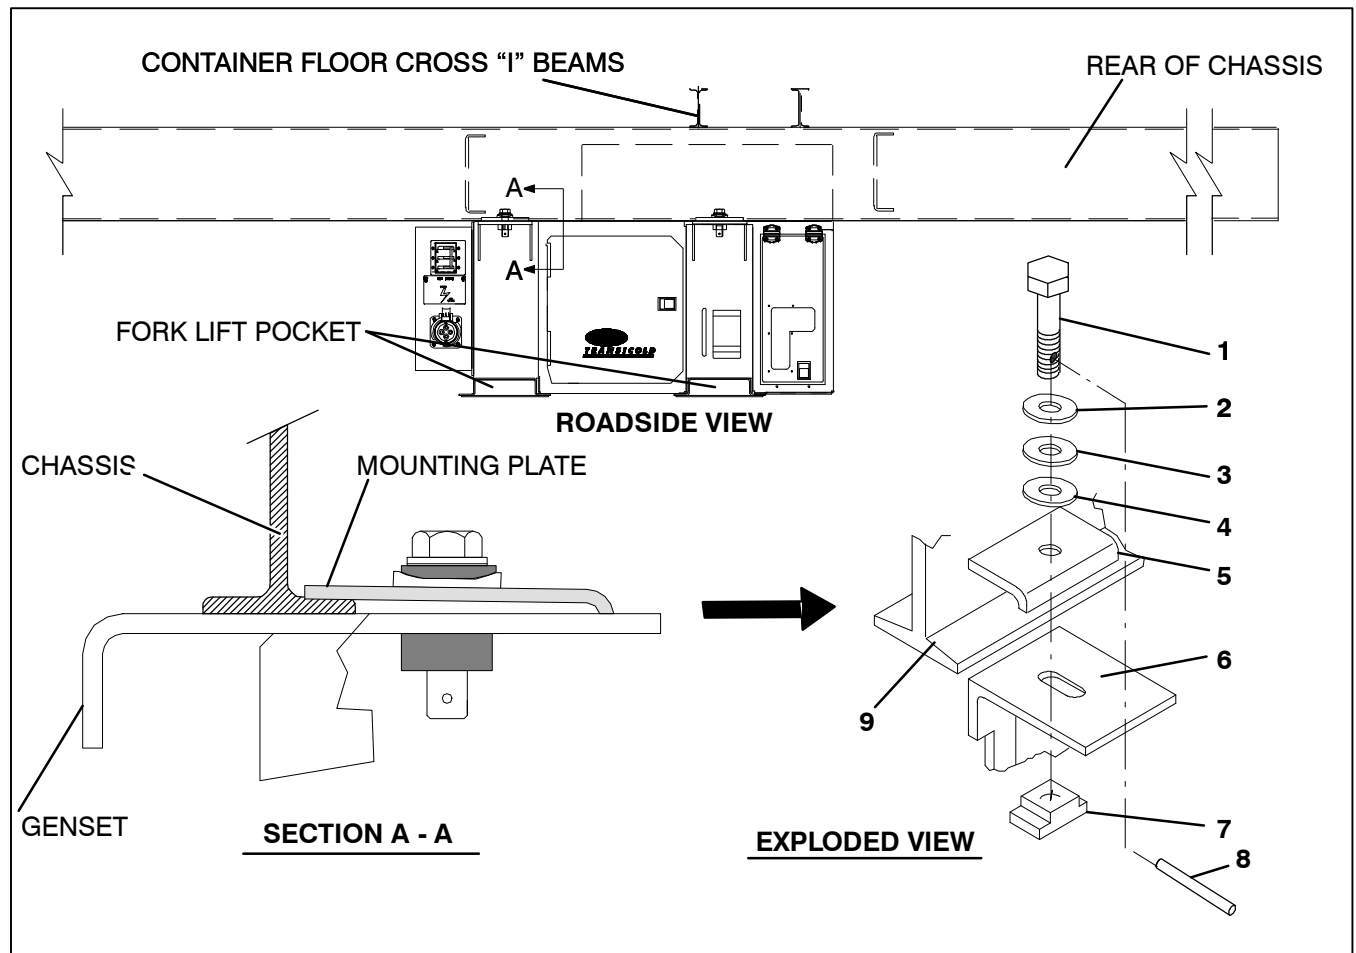

- | | |
|-----------------------|--------------------|
| 1. Bolt | 6. Generator Frame |
| 2. Washer, Belleville | 7. Tee Nut |
| 3. Washer, Spherical | 8. Roll Pin |
| 4. Washer, Spherical | 9. Chassis I-beam |
| 5. Mounting Plate | |

Figure 2-1. Typical Generator Set Mounting - Standard Mount

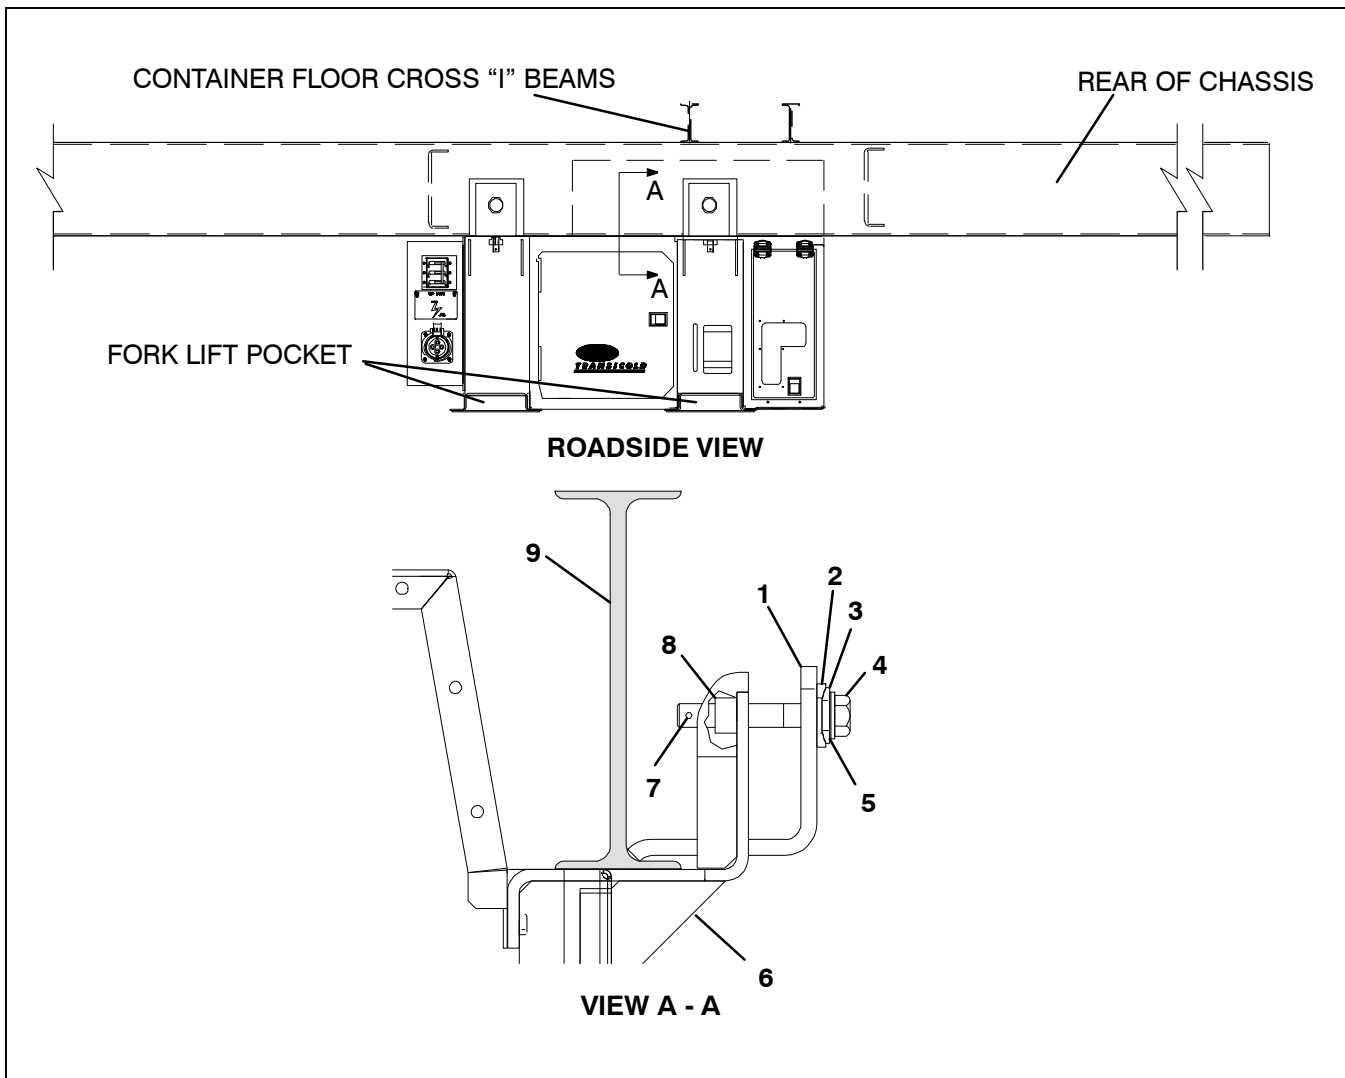

- | | |
|----------------------------------|---------------------|
| 1. Angle Assembly, Clamp | 6. Frame Assembly |
| 2. Washer, Spherical | 7. Roll Pin |
| 3. Washer, Spherical | 8. Nut, Hex, 3/4-10 |
| 4. Bolt | 9. Chassis I-beam |
| 5. Washer, Spherical, Belleville | |

Figure 2-2. Typical Generator Set Mounting - Quick Mount

2.2 GENERATOR SET REMOVAL

a. Standard Mount

1. Disconnect power cable to generator (if connected).
2. Disconnect fuel lines (if fuel tank is remote).
3. With fork lift in position and safety chain attached, slide mounting plates back sufficiently to clear chassis.

4 Lower and remove generator.

b. Quick Mount

1. Disconnect power cable to unit (if connected).
2. Disconnect fuel lines (if fuel tank is remote).
3. With fork lift in position and safety chain attached, loosen mounting bolts, and lift end of bolts out of slot to orient clamps to open position.

2.3 STARTING AND STOPPING INSTRUCTIONS

2.3.1 Pre-Start Inspection

- Check engine lubrication and fuel filters, oil lines, and connections for leaks. If required, tighten connections and/or replace gaskets.
- Check engine lubricating oil level. (Refer to paragraph 1.10, table entry f.)
- Check V-belt for fraying or cracks and proper tension. (Refer to paragraph 4.4.6).
- Check radiator hoses for leaks and check radiator coolant level. (Refer to paragraph 1.10, table entry j.)
- Check radiator coil and generator air intake screen for cleanliness. If required, clean using compressed air, reversing the normal air flow.
- Check air cleaner for cleanliness and clean if necessary. (Refer to paragraph 4.4.10.)
- Drain water from fuel tank sump and filter bowl.
- Fill fuel tank with diesel fuel. (Refer to paragraph 1.10, table entry g.)
- Check glow plug amperage. (Refer to paragraph 1.10, table entry h.)
- Check battery terminals for cleanliness and secureness. If required, clean, then coat with a battery terminal sealant.
- Check, and if required, tighten all electrical connections.
- Check, and if required, tighten all hardware (brackets, etc.).
- Ensure the main generator set circuit breaker is off (CB-1 for 460 volt units or CB4 for 230 volt units). Connect power cable to refrigeration unit and proceed to paragraph 2.3.2.

2.3.2 Starting Instructions



WARNING

Beware of moving V-belt, belt driven components and hot exhaust components.



WARNING

Under no circumstances should ether or any other unauthorized starting aids be used in conjunction with the glow plugs.

NOTE

Piston rings in engines that have operated less than 100 hours may not be fully seated. This may lead to the possibility of oil seepage from the exhaust pipe. To properly seat the rings, operate the engine under full load for a period of 24 hours. If the condition persists, check valve clearance when the engine is cold (Refer to engine workshop manual listed in paragraph 1.2).

a. Standard Units

- Hold glow plug switch (see Figure 1-6) in the PRE-HEAT position. Suggested hold times for a cold engine are as follows.

COLD ENGINE GLOW TIMES	
Ambient Temperature	Time
68F/20C	5 seconds
32F/0C	20 seconds
18F/-8C	40 seconds
Below 18F/-8C	1 minute intervals

- With the glow plug switch held in the PREHEAT position, place the ignition switch in the START position.
- After the engine has started, continue to hold the glow plug switch in the PREHEAT position until the engine develops sufficient oil pressure to close the oil pressure safety switch. When released, the glow plug switch will automatically return to the OFF position.

b. Units with Auto Start

- Place the Ignition switch (IGN) in the Run position.
- If the low coolant sensor (LCS) is immersed in coolant, the auto restart module will energize the glow plugs for 40 seconds and the safety buzzer will sound. After the 20 second delay, the unit will attempt to start.

2.3.3 Post-Start Inspection

- Check generator output with a voltmeter. In the no load condition, output should be at rated output of 460(+/- 10%) or 230 volts AC (+/- 5%) with 1820 to 1840 engine RPM. Place generator set main circuit breaker in the ON position. Start refrigeration unit and check generator (1710 RPM).
- Check total time meter operation (run engine 10 minutes).
- Listen for abnormal bearing noise (AC generator).
- Check fuel lines, lube oil lines, and filters for leaks.
- Check exhaust system for leaks.

2.3.4 Stopping Instructions

Place the ignition switch in the OFF position.

2.4 CONTROL CIRCUIT OPERATION



WARNING

Beware of moving poly V-Belt and belt driven components.

2.4.1 Sequence Of Operation

a. Standard Units

With the glow plug switch (GPS) held in the pre-heat position, current flows to the glow plugs. A second set of contacts also energizes the safety relay (S).

If the high water temperature switch (HWT) opens to break the safety relay ground connection, the safety relay will not energize, and the engine will not start.

To start the engine, the ignition switch (IGN) is held in the START position. With the switch in the START position, current flows to the start solenoid (SS), through the SS contacts to the starter motor (SM), and to the pull in winding of the fuel solenoid (FS). In addition, a second set of contacts energizes the oil pressure gauge (OPG), water temperature gauge (WTG), the total time meter (TT), and the run winding of the fuel solenoid. At the same time, power flows to the fuel heater thermostat (FHT). The thermostat, internal to the fuel filter head, energizes the fuel heater (FH) at cold fuel temperatures.

The starter motor turns over the engine resulting in pumping of fuel to the engine cylinders by the injection pump. This fuel is ignited by heat of compression; thus starting the engine. When the engine has developed sufficient oil pressure, the low oil pressure switch contacts close to maintain power to the safety relay.

Once the engine has started, the ignition switch is released to the RUN position. The glow plug switch is then released. Releasing the glow plug switch de-energizes the glow plugs, while releasing the ignition switch de-energizes the starter motor.

With the engine running, the battery charger provides DC power to operate the control system and charge the battery.

b. Units with Auto Start

When the ignition switch is placed in the run position, 12-volt DC power will be applied to the LCS and the auto restart module simultaneously. If the coolant level is below the sensor, all the indicator lights on the auto restart module will blink once and the LCS will open the contacts on the low coolant relay, de-energizing the unit's 12-volt DC circuitry. If the coolant level is above the sensor, the auto restart module will maintain power and all the lights on the module will illuminate. As the module performs its self test, the lights will then go out individually.

After the self test is complete, the module will energize the glow plugs and sound the audible warning alarm indicating that the unit has been powered on and will start (the 20 second glow plug delay starts at this time). When the 20 second glow plug delay expires, power will be applied to the fuel solenoid and the engine attempts to crank for 15 seconds.

When the engine starts, the glow plug circuit is de-energized, the shutdown lockout time delay of 15 seconds will begin timing and the starter will be disengaged. During this 15 second delay, at start up, the auto restart module will disregard the signals to the oil pressure and engine temperature inputs, and the Run sequence begins (see Restart Procedure). If engine does not start, refer to Table 1.3 for auto restart sequencing.

SECTION 3

TROUBLESHOOTING

3.1 DIESEL ENGINE

CONDITION	POSSIBLE CAUSE	REMEDY/ REFERENCE SECTION
3.1.1 Engine Will Not Start		
Starter motor will not crank or low cranking speed	Battery insufficiently charged Battery terminal post or battery defective Bad electrical connections at starter Starter motor malfunctions Starter motor solenoid defective Open starting circuit Incorrect grade of lubricating oil	Charge Check Correct 3.1.4 Engine Manual 3.1.5 1.10.f.
Starter motor cranks, but fails to start	No fuel in tank Air in fuel system Water in fuel system Plugged fuel filters Glow plug(s) defective Plugged fuel lines to injector(s) Mechanical lift fuel pump malfunction	1.9/1.10.g 4.4.1 Drain Sump Replace 4.4.12 Engine Manual Engine Manual
Starter cranks and engages, but dies after a few seconds	Engine lube oil too heavy Voltage drop in starter cable(s)	1.10.f. Check
3.1.2 Engine Starts Then Stops		
Engine stops after a few rotations	No fuel in tank Fuel filter restricted Air cleaner or hose restricted Safety device open Open wiring circuit to fuel solenoid Fuel solenoid Fuel supply restricted Mechanical lift fuel pump malfunction Oil pressure switch defective Leak in fuel system Injector nozzle(s) defective Injection pump defective Generator internal overloads open	1.9/1.10.g Replace 4.4.10 1.8 Check Replace 1.10.g/4.4.2/4.4.3 Engine Manual Replace Check Engine Manual Engine Manual Table 1-4
3.1.3 Engine Will Not Shut Off		
Engine will not shut off	Loose ground connection Improperly seated fuel solenoid	Clean & Tighten Correct

CONDITION	POSSIBLE CAUSE	REMEDY/ REFERENCE SECTION
3.1.4 Starter Motor Malfunction		
Starter motor will not crank or turns slowly	Battery insufficiently charged Battery cable connections loose or oxidized Battery cables defective Starter brushes shorted out Starter brushes hang up, defective or have no contact Starter solenoid damaged Ignition switch defective Engine lube oil too heavy	Charge Check Replace Engine Manual Engine Manual Engine Manual Replace 1.10.f.
Starter motor turns, but pinion does not engage	Pinion or ring gear obstructed or worn	Engine Manual
Starter motor does not disengage after switch has been released	Ignition switch defective Starter motor solenoid defective	Replace Engine Manual
Pinion does not disengage after engine is running	Defective starter	Engine Manual
3.1.5 Malfunction in the Engine Starting Circuit		
No power to starter motor solenoid	Battery defective Loose electrical connections	Correct Tighten
Fuel solenoid does not energize or does not remain energized	Battery defective Loose electrical connections Oil pressure switch defective Water temperature safety switch open Fuel solenoid defective Ignition switch defective	Correct Tighten 1.8 1.8 Engine Manual Replace
3.1.6 Miscellaneous Engine Troubleshooting		
Loss of power	Restriction in air cleaner Air in fuel system Air vent restricted Restricted fuel lines Defective fuel injection pump Defective injector(s) or incorrect type Incorrect fuel injection pump timing Incorrect valve timing Poor compression	4.4.10 4.4.1 Clean Engine Manual Engine Manual Engine Manual Engine Manual Engine Manual
Vibration	Engine shockmounts defective Poor compression	Replace Engine Manual
Overheating	Restriction in air cleaner Exhaust pipe restriction Restriction in water jacket Restriction in radiator Coolant level too low Loose water pump/alternator V-belt Defective thermostat Defective water pump	4.4.10 Remove Engine Manual 4.4.4 1.10.j. 4.4.6 Engine Manual Engine Manual
Excessive crankcase pressure	Plugged crankcase breather line	4.4.11

CONDITION	POSSIBLE CAUSE	REMEDY/ REFERENCE SECTION
3.2 BATTERY CHARGER (SOLID STATE)		
Input fuse blows when charger is turned on	Short in 12-volt wiring causing overload of charger	Locate and remove short
Input fuse blows repeatedly, even when not connected	Internal short	Replace
Charger does not taper back after charging for a few minutes	Bad cell in battery Defective charger	Test battery for defect according to battery manufacturer's instructions Replace
Charger does not charge	Open input circuit breaker Charger is not receiving AC input Charger output is not connected to 12 volt battery Defective charger	Reset Using a voltmeter, confirm charger is receiving correct (230v) AC voltage. If not check input connections. Check output wiring connections to battery. Replace
Low output voltage measured across charger output	Battery not connected to charger. It is normal to measure 12 volts or less across charger output with no battery connected	Check charging leads from charger to battery
Reverse polarity connection to battery has caused charger to stop charging	Internal DC fuse blown and possible damage to current carrying components	Replace

CONDITION	POSSIBLE CAUSE	REMEDY/ REFERENCE SECTION
3.3 ALTERNATING CURRENT GENERATOR		
No voltage	Loss of residual magnetism in exciter field Circuit breaker tripped Open in stator windings Open or short in rotating rectifiers Short circuited Open in alternator field Shorted exciter armature	4.5.2.a. Check 4.5.4/Replace 4.5.1.c. 4.5.4/Replace 4.5.4/Replace 4.5.4/Replace
Low voltage	Low engine speed Excessive load High resistance connections - connections warm or hot Shorted field	4.4.8 Check Tighten 4.5.4/Replace
Fluctuating voltage (May be indicated by flickering lights)	Fluctuating speed Irregular speed of engine Loose terminal or load connections Defective bearing causing uneven air gap	4.4.8 Engine Manual Tighten 4.5.1/4.5.3
High voltage	Excessive engine speed	4.4.8
Overheating	Generator overloaded Clogged ventilating screens High temperature surrounding generator Insufficient air circulation Unbalanced load Dry bearing	Check Clean 4.4.4 4.5.1 Balance 4.5.1/4.5.3
Mechanical Noise	Defective bearing Rotor scrubbing on stator Loose laminations Loose or misaligned coupling	4.5.1/4.5.3 4.5.1/4.5.3 4.5.4/Replace 4.5.4
Generator frame produces shock when touched	Static charge Grounded armature of field coil	Check ground to frame 4.5.4/Replace

CONDITION	POSSIBLE CAUSE	REMEDY/ REFERENCE SECTION
3.5 AUTO RESTART OPTION		
When the Ignition switch is placed in the run position, nothing happens	Wait 60 seconds for glow plug delay Coolant level below the low coolant sensor Relay defective Ignition switch defective 3 amp Fuse Bad Loose connector on module Defective module	- 1.10.j. Check and Re- place Check and Re- place Switch Check and Re- place Fuse Tighten connec- tor Check for 12 volts at pin 4.Re- place module
Alarm sounds, but engine does not crank	No Voltage at pin 2 of the connector Check Starter Solenoid Module Defective	Trace and Cor- rect Refer to 3.1.1 Replace
Engine starts, but the starter does not disengage	Speed Sensor wiring loose Speed Sensor Defective Module Defective	Check and cor- rect Replace Replace
Engine starts, but shuts down from over speed.	Engine speed out of adjustment	Refer to 4.4.8
Engine cranks, but will not start	Refer to 3.1.1 Defective Module	Refer to 3.1.1 Replace
Engine starts, but shuts down on Low oil	-	Refer to 3.1.2
Engine starts, but shuts down on high water temperature	-	Refer to 3.1.6

SECTION 4

SERVICE AND PREVENTIVE MAINTENANCE

4.1 INTRODUCTION

This section covers service for the generator set and general engine service. Refer to the Kubota engine workshop manual (refer to section 1.1) for other engine servicing.

WARNING

Beware of moving poly V-belt and belt driven components.

4.2 PREVENTIVE MAINTENANCE SCHEDULE

A tabular listing of the recommended preventative maintenance activities and schedule is provided in Table 4-1.

4.3 BATTERY SERVICE

When replacing the battery, note if the unit was supplied with a mat in the battery tray. If so equipped, the mat must also be replaced.

4.4 ENGINE SERVICE AND COMPONENTS

4.4.1 Priming the Fuel System

The unit is equipped with a mechanical fuel lift pump, mounted on the engine next to the injection pump. The fuel system is a closed circuit, which will require bleeding if loss of fuel has occurred. To fill and bleed the system, do the following:


- Turn fuel bleed valve (Red, see Figure 1-3) counter-clockwise until fully opened.
- Turn the top of the manual priming pump (see Figure 4-1) counter-clockwise to unlock it, and then rapidly hand pump the manual plunger until a positive pressure (resistance) is felt. This will indicate fuel flow.
- Depress and turn the top of the manual priming pump clockwise to lock in place.
- Start engine. (Refer to section 2.3).
- When engine is running properly, turn fuel bleed valve clockwise until fully closed.

4.4.2 Servicing Fuel Pump Internal Filter

The internal fuel filter may become plugged or restricted if foreign particles or wax, which can develop if the wrong grade of fuel is used or untreated fuel is used in cold weather, contaminating the fuel. If the internal filter is plugged, the engine will lose power. Therefore, the filter must be cleaned on a regular basis. The quality of the fuel will affect the filter cleaning schedule (refer to section 4.2).

- Turn nut (item 1) counter-clockwise to loosen and remove .
- Remove banjo fitting (item 2) and let it hang loose, making sure to keep copper rings (item 4) for replacement.

- Turn filter (item 3) counter-clockwise and remove. Check and clean.
- To install reverse steps 1 through 3.

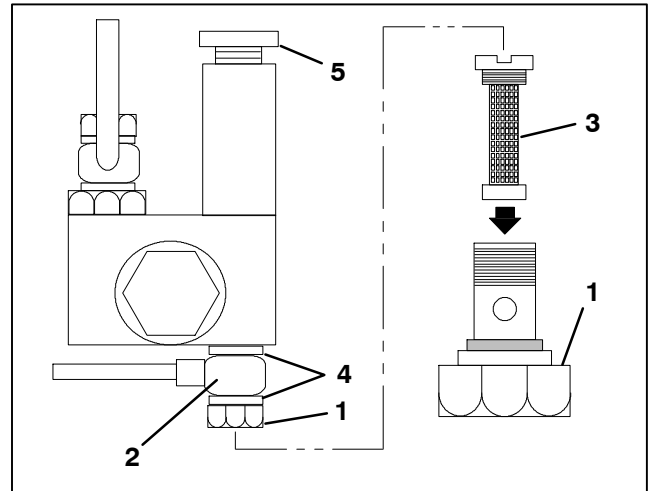

- | | |
|-----------|------------------------|
| 1. Nut | 4. Copper Rings |
| 2. Banjo | 5. Manual Priming Pump |
| 3. Filter | |

Figure 4-1. Mechanical Fuel Pump

4.4.3 Fuel Filter

The full flow filter is located on the generator set frame (see Figure 1-3). To renew, remove the filter with a filter wrench, pre-fill the new filter with fuel, lightly oil gasket with lube oil and replace by hand.

4.4.4 Cooling System

To ensure adequate cooling, the radiator must be clean, externally and internally. The fan belt must be adjusted periodically to provide maximum air flow (refer to paragraph 4.4.6). To service the cooling system, do the following:

- Remove all foreign material from the radiator coil by reversing the normal air flow. Compressed air or water may be used as a cleaning agent. It may be necessary to use warm water mixed with any good commercial dishwasher detergent. If a detergent is used, rinse coil(s) with fresh water.
- Drain coolant completely by opening drain cock and removing radiator cap.

CAUTION

Never pour cold water into a hot engine.

- Close drain cock and fill system with clean, untreated water to which three to five percent of an alkaline base radiator cleaner should be added; six ounces (dry) = 151 grams to one gallon (3.8 liter) of water.

Table 4-1 Preventative Maintenance Actions and Schedule

Description of Procedure	Reference Paragraph	Perform at Pre-Trip Inspection	Standard Service Interval Units		Extended Service Interval Units*
			Every 1000 Hours	Annually or Every 3000 Hours	
For Pre-Trip inspection perform items 1 through 15; for "After Start-up" checks, perform items 32 through 36					
1. Check (In Place) Engine/Generator Shockmounts for Cracks, Cuts, Abrasion or Flaring		X			
2. Check Engine Lubrication, Fuel Filter, and Connections for Leaks.		X	X		X
3. Check Engine Lubrication Oil Level, Add as Required	1.10.f.	X	X		X
4. Check V-Belt for Fraying or Cracks and Proper Tension, Adjust as Required	4.4.6	X	X		X
5. Check Radiator Hoses for Leaks, Check Coolant Level and 50/50 Mixture	1.10.j.	X	X		X
6. Check Radiator Coil and Generator Air Intake for Cleanliness (Clean Using Compressed Air, Reversing Air Flow Direction)		X	X		X
7. Check Air Cleaner					
7a. Oil Bath Air Filter: Check for Cleanliness and Clean (Filter Body, and Internal Mesh) Change Oil every 250 Hours	4.4.10.d.	X	X		X
7b. Dry Element Air Filter with Filter Minder. Check for Cleanliness and Clean/ Replace as Filter Minder indicates.	4.4.10.c.	X	X		X
8. Drain Water from Fuel Tank Sump and Fuel Filter Bowl		X	X		X
9. Fill Fuel Tank with Diesel Fuel, Check Fuel Gauge Operation	1.10.g.	X	X		X
10. Check Glow Plug Amperage	1.10.h.	X	X		X
11. Check Battery Terminals for Tightness and Cleanliness. (Clean and coat w/battery terminal sealant)		X	X		X
12. Check for Dirty/Loose Electrical Connections, Frayed Cables/Wires and Cracked Insulation		X	X		X
13. Tighten all Hardware (Brackets, etc.)		X	X		X
14. Clean Oil Bath Air Filter Body, and Internal Mesh. (See Note 2)	4.4.10		X		X
15. Clean Mechanical Fuel Lift Pump Internal Filter	4.4.2	X	X		X
16. Change Lubricating Oil and Filter(s) (See Note 1)	4.4.7		X		X
17. Tighten Engine and Generator Mounting Bolts.	4.7		X		X
18. Tighten all Electrical Connections in the Control Box			X		X

* Extended Service Interval (ESI) Units can be identified by a label on the access door opening.

Table 4-1 Preventative Maintenance Actions and Schedule (Continued)

Description of Procedure	Reference Paragraph	Perform at Pre-Trip Inspection	Standard Service Interval Units		Extended Service Interval Units
			Every 1000 Hours	Annually or Every 3000 Hours	
19. Verify Operation Of Engine Protective Devices			X		X
20. Check Water Pump Bearing End Play	See Engine Manual		X		X
21. Change Fuel Filter	4.4.3			X	X
22. Clean Crankcase Breather	4.4.11			X	X
23. Remove and Check Engine/Generator Shockmounts for Cracks, Cuts, Splits, Abrasion or Flaring	4.6.2			X	X
24. Check and If Required Replace V-Belt	4.4.6			X	X
25. Clean and Flush Coolant System	4.4.4			X	See Note 3
26. Check Starter Condition	See Engine Manual			X	X
27. Check Engine Compression	See Engine Manual			X	X
28. Check and Adjust Injector Nozzles	See Engine Manual			X	X
29. Perform Generator Maintenance	4.5.1			X	X
After Starting Generator Set, perform the following:					
30 Check Total Time Meter Operation (Allow Engine to Run 10 Minutes)		X			
31 Listen for Abnormal Bearing Noise		X			
32 Check Fuel Lines, Lube Oil Lines and Filters for Leaks.		X			
33 Check Exhaust System For Leaks		X			
34 Check with voltmeter. Generator output should be 400-500 volts AC no load (engine, 1830-1840 RPM). With a nominal frequency of 60Hz +/- 2.5% Turn refrigeration unit on and check generator 1720 RPM minimum under full load (15 kW).		X			

NOTES:

1. 500 hour interval in extreme operation conditions
2. 250 hour interval in extreme operation conditions
3. Four years or 4000 hours if unit is factory charged with long life (red/orange) coolant

- d. Run engine 6 to 12 hours and drain system while warm. Rinse system three times after it has cooled down. Refill system with water.

CAUTION

Use only ethylene glycol, anti-freeze (with inhibitors) in system, as glycol by itself will damage the cooling system. (Refer to paragraph 1.10.j.)

- e. Run engine to operating temperature. Drain system again and fill with treated water/anti-freeze (see above Caution note).

4.4.5 Servicing the Low Coolant Sensor

a. Testing the Low Coolant Sensor (LCS)

1. Verify the coolant level is correct.
2. Verify the wiring to the sensor is correct.
3. Check voltage (12.5 to 13.5 VDC) to the B terminal with the ignition switch on (see Figure 4-2).
4. Check continuity between terminals A and C (see Figure 4-2) while 12 VDC is applied to terminal B.
5. Drain the coolant from the system to below the level of the coolant sensor and remove the sensor as described in 4.4.5.b. Steps 1 and 2 below.
6. With the sensor removed from the radiator and 12 VDC is applied to terminal B the circuit between terminals A and C should be open.

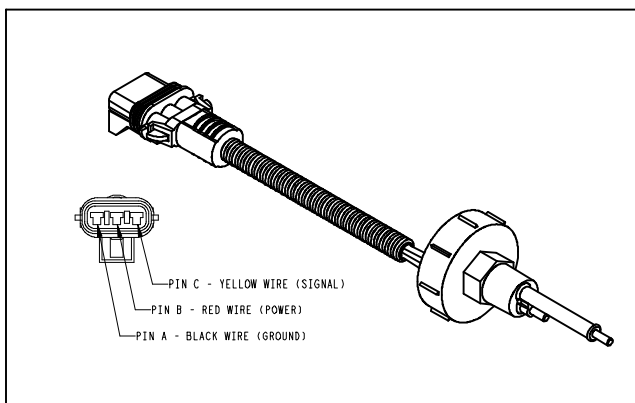


Figure 4-2. Low Coolant Sensor

CAUTION

Never open the radiator cap when the coolant is hot.

b. Replacing the Low Coolant Sensor (LCS)

1. Loosen the radiator drain pet cock and drain coolant into an approved container to below the sensor.
2. Unplug the harness and remove sensor from radiator header.
3. Apply Teflon thread tape or thread sealer to the LCS threads and install sensor.
4. Reconnect the harness and refill the radiator to proper level.

4.4.6 Servicing and Adjusting V-belt

WARNING

Beware of moving V-belt and belt driven components

WARNING

Beware of pinch points.

NOTE

A frayed, cracked or worn V-belt must be replaced. After installing a new belt, it is advisable to check the adjustment after running the unit for three or four hours. This will allow for the initial stretch, which is common on new belts. Once this initial stretch has taken place, the belt should be checked at regular intervals.

The V-belt is driven by a sheave on the engine crankshaft. Its two functions are: (1) to drive the radiator fan and (2) to drive the water pump.

To replace and/or adjust the V-belt, do the following:

Notched V-Belt:

a. Replacing

1. Loosen the idler pivot bolt.
2. Replace the belt and adjust tension in accordance with the following steps.

b. Adjusting Tension

1. Check belt tension. The correct tension is 40-45 pounds on the belt tension gauge (Carrier Transicold P/N 07-00203). Use hand force only on the idler pulley to tighten belt. *Do not use a pry bar or excessive force as it may cause damage to the engine.*
2. When belt is at correct tension, tighten pivot bolt.

Poly V-Belt:

a. Replacing

1. Using the proper size socket, slowly rotate the crank on the crank pulley nut. At the same time, use a flat, blunt object to guide the belt off the crank pulley towards radiator. Be careful not to damage grooves on the pulley.
2. Replace the Poly-V-Belt by positioning the belt on the water pump pulley, and while rotating the engine (as in step 1), use a flat, blunt object to guide the belt onto the crank pulley. Be careful not to damage grooves on the pulley or belt.

4.4.7 Lube Oil Filter

The primary oil filter is located near the radiator fan, while the by-pass filter is located on the generator set frame (see Figure 1-4).

- a. After warming up the engine, stop engine, remove drain plug from oil reservoir and drain engine lube oil.

- b. Replace filters. Lightly oil gasket on filter before installing.
- c. Add lube oil. (Refer to paragraph 1.10.f)
- d. Warm up engine and check for leaks.

4.4.8 Adjusting Engine Speed

The engine is to operate at 1820 to 1840 RPM (no load), 1710 RPM (with full load). To check the engine speed, do the following:


- a. With the engine stopped, place a mark (white paint for example) on the crankshaft sheave. Start engine and verify engine speed using a strobe tachometer (Carrier Transicold Part No. 07-00206.)

- b. To Increase Speed:

Loosen jam nut (see Figure 4-3). Turn cap screw clockwise until correct speed is achieved, then tighten jam nut and recheck engine speed.

- c. To Decrease Speed:

Loosen jam nut (see Figure 4-3). Turn cap screw counter-clockwise until correct speed is achieved, then tighten jam nut and recheck engine speed.

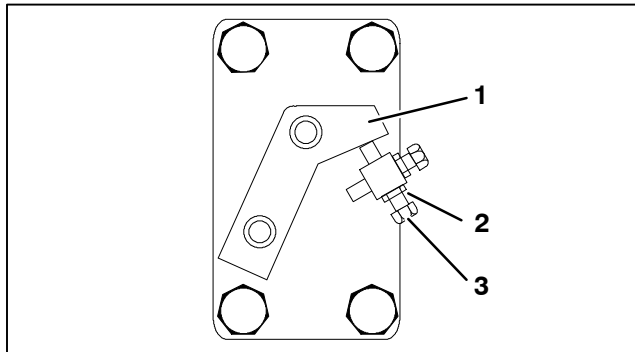

- | | |
|----------------|--------------|
| 1. Speed Lever | 3. Cap Screw |
| 2. Jam Nut | |

Figure 4-3. Engine Speed Adjustment

4.4.9 Servicing the Engine Speed Sensor

1. Disconnect the plug to the sensor.
2. Remove the bolt securing the sensor to the flywheel housing.
3. Remove the sensor from the flywheel housing.
4. Clean the recess in the the flywheel housing to insure that the sensor seats properly when re-installed.
5. Re-install by sensor, replace the securing bolt and connect the plug to the sensor.

4.4.10 Engine Air Cleaner

a. Inspection

The dry type or oil bath air cleaner should be inspected regularly for leaks. A damaged air cleaner or hose can seriously affect the performance and life of the engine. The air cleaner is designed to effectively remove contaminants from the air stream entering the engine. An excessive accumulation of these contaminants in the air cleaner will impair its operation. Therefore, a service schedule must be set up and followed.


1. Check all connections for mechanical tightness. Be sure the air cleaner outlet pipe is not fractured.
2. In case of leakage and if adjustment does not correct the trouble, replace necessary parts or gaskets. *Swelled or distorted gaskets must always be replaced.*

b. Air Filter Indicator

The air filter indicator is mounted on the unit frame and connected to the engine air intake. Its function is to indicate when the air cleaner element requires replacing. In operation: When a plugged air cleaner decreases intake manifold pressure to 500 mm (20") WG, the indicator moves to the red line. The air cleaner element should be replaced and the indicator reset by pressing the reset button.

c. Service Procedure (Dry Type)

1. Stop the engine, remove air cleaner and install a new element. Refer to Figure 4-4.

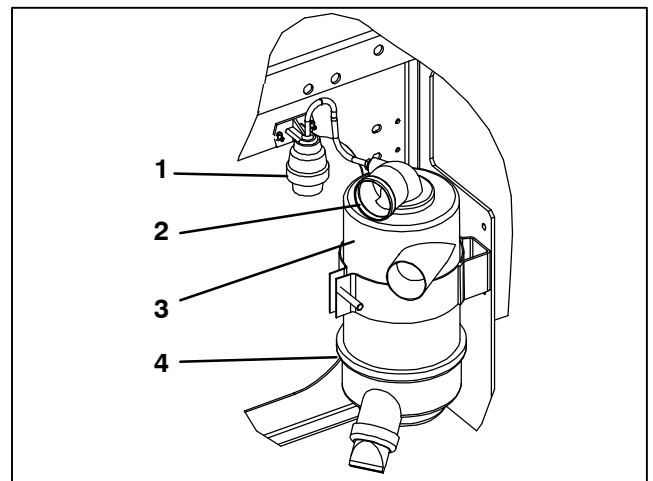

1. Air Filter Indicator
2. Air Inlet
3. Air Cleaner Body
4. Cap Clamp

Figure 4-4. Air Filter (Dry Element Type)

d. Service Procedure (Oil Type)

Inspect the oil cups (see Figure 4-5) at regular intervals. Initially, inspect daily or as often as conditions require. Never allow more than 1/2 inch (12.7 mm) of dirt deposit in the cup. More than 1/2 inch accumulation could result in oil and dirt carrying over into the engine, causing accelerated engine wear. Heavily contaminated oil will not allow the air cleaner to function properly.




Always cover the engine inlet tube while the air cleaner is being serviced.

Stop the engine and remove the oil cups from the air cleaner. Dispose of the oil in an environmentally safe manner. Remove the inner cup from the oil cup and clean both cups.

Reassemble and fill both oil cups to the *indicated level* with oil specified in paragraph 1.10.f.

CAUTION

Do not underfill or overfill the oil bath cups. Overfilling cups causes loss of capacity and underfilling cups causes lack of filtering efficiency.

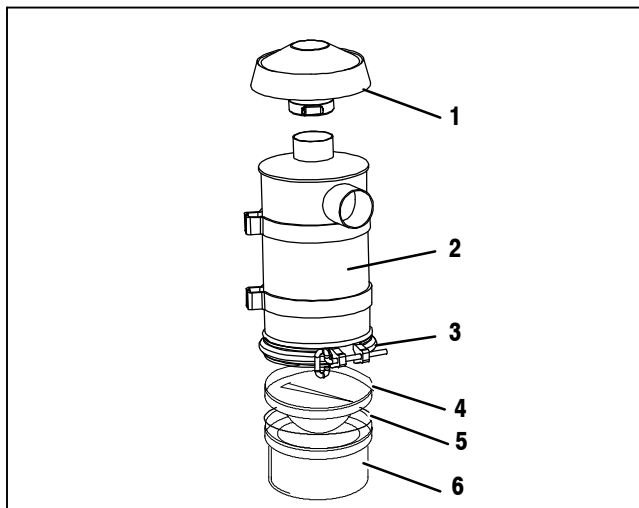

- | | |
|---------------------|------------------|
| 1. Air Inlet Hood | 4. Inner Oil Cup |
| 2. Air Cleaner Body | 5. Gasket |
| 3. Cap Clamp | 6. Oil Cup |

Figure 4-5. Air Filter (Oil Bath Type)

e. Service - Body Assembly

The lower portion of the air cleaner should be inspected each time the oil cup is inspected or serviced. If there is any sign of contaminant buildup or plugging, the body assembly should be removed and back flushed.

At least once a year or at regular engine service periods, remove the entire air cleaner and perform the following:

1. Remove oil cups. Check and clean center tube.


WARNING

Do not use gasoline to clean air cleaner parts.

2. Pump solvent through the air outlet with sufficient force and volume to produce a hard, even stream out of the bottom of the body assembly. Reverse flush until all foreign material is removed.

4.4.11 Engine Crankcase Breather

The engine uses a closed type breather with the breather line attached to the cylinder head cover (see Figure 4-6). Element style breather assemblies should be brushed clean. It is not necessary to disassemble valve style elements for cleaning. However, the bleed hole should be checked to ensure it is free of obstruction. Check once a year or at every 3,000 hours maintenance interval, whichever comes first.

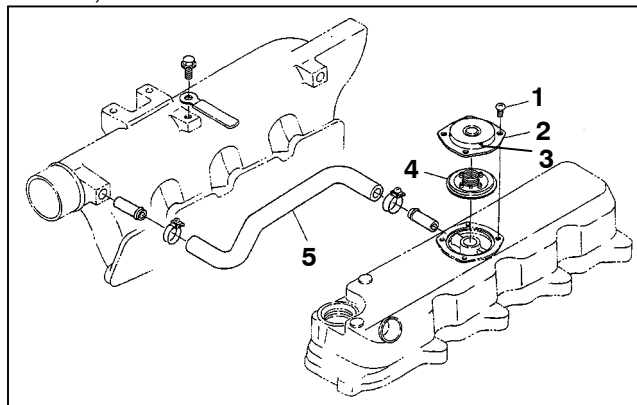

- | | |
|-------------------|-------------------|
| 1. Screw | 4. Breather Valve |
| 2. Breather Cover | 5. Breather Tube |
| 3. Bleed Hole | |

Figure 4-6. Engine Crankcase Breather

4.4.12 Servicing Glow Plugs

The glow plugs are parallel connected, and when energized, each plug draws 7.5 amps at 12 VDC. When servicing, the glow plug is to be hand-fitted into the cylinder head to prevent thread damage. Torque value for the glow plugs is 28.9 to 36.2 ft-lb (4.0 to 5.0 mkg).

Checking for a Defective Glow Plug:

- a. Method 1: Place an ammeter (or clip-on ammeter) in series with each glow plug and energize the plugs. Each plug should show 7 to 10 amps draw.
- b. Method 2: Disconnect the wire connection to the plug and test the resistance from the plug to a ground on the engine block. The reading should be 0.7 to 1.2 ohms if the plug is good.

4.5 SERVICING THE ALTERNATING CURRENT GENERATOR

4.5.1 Preventive Maintenance and Operating Precautions

Costly repairs and down time can usually be prevented by operating electrical equipment under conditions that are compatible with those under which the equipment was designed. Follow the instructions outlined below to insure maximum efficiency of the electrical equipment.

a. Cooling

Keep all cooling parts clean. **DO NOT EXCEED TEMPERATURE RISE OF 80C (176F) ABOVE A 40C (104F) AMBIENT.** This ensures that the NEMA Class "F" insulation will not be damaged. **DO NOT EXCEED RATED LOAD** except as specified for the equipment. **OPERATE GENERATOR AT RATED SPEED.** Failure to operate generators at rated load or speed will cause overheating and possible damage to windings due to over voltage or current.

b. Generator Windings (Drying)

WARNING

Do not direct water or steam into the generator openings. Do not allow any soap and water solutions to enter the alternator.

WARNING

High voltage (dielectric) testing must not be performed to the machine without first observing NEMA rules. The insulation of this generator winding may be safely checked by using a megger. A high megger reading indicates good insulation.

Generators that have been in transit, recently steam cleaned or in storage for long periods may be subjected to extreme temperature and moisture changes. This can cause excessive condensation, and the generator windings should be thoroughly dried out before bringing the generator up to full nameplate voltage. If this precaution is not taken, serious damage to the generator can result. The following steps should be taken to effectively dry the generator windings:

1. Dry windings by placing generator in drying oven or hot room, or dry with warm air blower directed through windings.
2. If the generator has been operated and is being placed into storage for any period of time, a P.D. George #11127 type air-dry fungus resistant varnish should be applied.

The finest insulation job can be very quickly broken down by carelessly applying high voltage to windings in a moisture saturated condition. Failure to follow these guidelines could easily cause a breakdown, making it necessary to return the generator to the factory for repair.

c. Rotor Damage

If a rotor becomes defective, it should be returned to the factory with full nameplate data. To repair a rotor, the special tooling and technique of the factory are necessary and essential. Should a failure occur, Carrier Transicold should be notified immediately and steps will be taken to return the generator for service.

d. Terminal Strip Cleaning

Open Terminal Box. Remove dust and debris, and clean terminal strip with wire brush. Reapply protective coating.

4.5.2 Generator Repair/Test Procedures

a. Restoring Residual Magnetism

The direct current (DC) necessary to magnetize the alternator field is obtained from the exciter. Initially, upon starting the generator, current flow and voltage are induced into the exciter armature by the magnetic lines of force set up by the residual magnetism of the exciter field poles.

Residual magnetism of the exciter field poles may be lost or weakened by a strong neutralizing magnetic field from any source, or if the generator is not operated for a long period of time.

Should the generator fail to build up voltage after being disassembled for any reason, a momentary short-circuit of any two generator leads (L1, L2 and L3) while generator is running should be sufficient to correct this condition.

NOTE

When trying to restore residual magnetism, be sure to wear safety glasses and non-conductive gloves. Use an insulated 12 gauge (or higher) jumper wire. Cut-off all but a few strands from both ends of the jumper wire to help ensure fusing does not take place.

As an alternate method, apply either an alternating current or a direct current voltage of approximately 20 volts to any two generator leads (L1, L2 and L3) while generator is running. Do not make a positive connection, but rather touch the leads together until the generator voltage begins to rise and then remove. It is suggested that a 30 ampere fuse be inserted in the circuit to prevent any damage in case the build-up voltage is not removed quickly enough. Reflash field if generator output voltage does not build up.

b. Winding Insulation Testing

Continuity test results for the stator winding tests are provided in the following table.


Wire Pair	Ohm*	Wire Pair	Ohm*	Wire Pair	Ohm*
T10-T1	I	T1-T8	I	T4-T5	I
T10-T2	I	T1-T9	I	T4-T6	I
T10-T3	I	T2-T3	I	T4-T7	I
T10-T4	I	T2-T4	I	T4-T8	I
T10-T5	I	T2-T5	0	T4-T9	I
T10-T6	I	T2-T6	I	T5-T6	I
T10-T7	0	T2-T7	I	T5-T7	I
T10-T8	0	T2-T8	I	T5-T8	I
T10-T9	0	T2-T9	I	T5-T9	I
T1-T2	I	T3-T4	I	T6-T7	I
T1-T3	I	T3-T5	I	T6-T8	I
T1-T4	0	T3-T6	0	T6-T9	I
T1-T5	I	T3-T7	I	T7-T8	0
T1-T6	I	T3-T8	I	T7-T9	0
T1-T7	I	T3-T9	I	T8-T9	0

* 0 = no resistance (closed circuit) & I = infinite resistance (open circuit)

c. Diode Testing

The rectifier diode assemblies can be tested, and if damaged, replaced. Over current, over voltage, over speed, or reverse currents can damage the assembly or diodes. To remove the diode assemblies and perform diode testing, do the following:


1. Remove the bearing cover by removing the four bolts (see Figure 4-7). Both the bearing and diode assemblies will be visible.

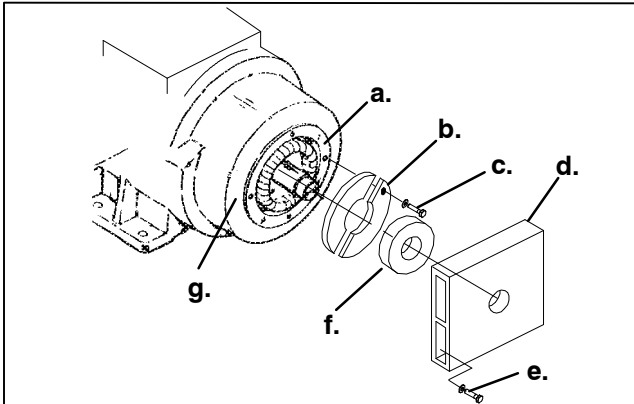

- | | |
|-----------------------|-------------------------|
| a. Rectifier Flange | e. Bearing Cover Bolt |
| b. Rectifier Assembly | f. Bearing |
| c. Rectifier Bolt | g. Bearing Cover Flange |
| d. Bearing Cover | |

Figure 4-7. Rectifier Removal

2. Mark and disconnect the alternator rotor wires at the rectifier screw terminals. Note that the terminals are marked with red paint for the forward diode assembly and black for the reverse diode assembly. Mark and disconnect the exciter leads from the double spade terminals. (See Figure 4-8.)

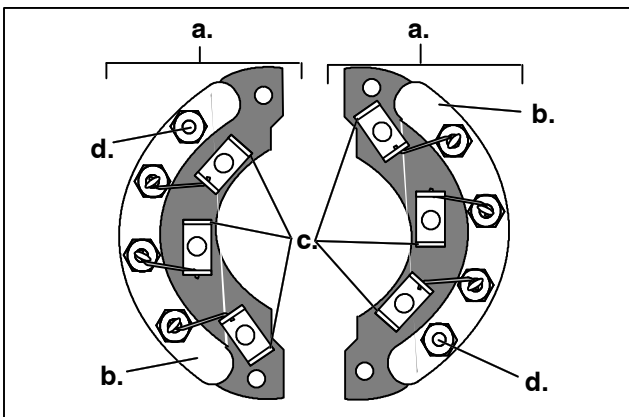

- | |
|-------------------------------------|
| a. Diode Assembly |
| b. Diode Bridge |
| c. Exciter Rotor Lead Connection |
| d. Alternator Rotor Lead Connection |

Figure 4-8. A-C Generator Rectifier Assembly

3. Remove the two cap screws that secure each diode assembly to the spider. Once this procedure is complete, the diode assemblies are free for removal.

4. A forward diode should have a low resistance when the + of an ohm meter is connected to the exciter rotor lead connection (anode) and the - to the diode bridge (cathode), and a high resistance when the polarity of the ohmmeter is reversed.
5. A reverse diode should have a high resistance when the + of an ohm meter is connected to the exciter rotor lead connection (anode) and the - to the diode bridge (cathode), and a low resistance when the polarity of the ohmmeter is reversed.
6. If both resistances are high or both are low, the diode is defective and the diode assembly should be replaced.

4.5.3 Bearing Replacement

When operated under normal conditions, factory lubricated shielded bearings will normally provide years of trouble free service. Excessive bearing load and adverse environment conditions will greatly shorten bearing life. To remove the bearings, do the following:

1. Remove bearing cover. (See Figure 4-7.)
2. Remove bearing with using a bearing or wheel puller.
3. Install new bearing. Ball bearings are pre-lubricated and require no further lubrication for the life of the bearing.
4. Coat mating surface of bearing cover flange with anti-corrosion compound (Tef-Gel, Carrier Part Number 02-00083-00). Replace bearing cover.

4.5.4 Generator Installation and Removal

a. Removing the Generator

1. Remove covers and ground wire from frame of generator set.
2. Remove connection box cover and disconnect power leads.
3. Remove screen cover and generator exhaust baffle from coupling end of generator.
4. Remove the six 8mm hex head bolts and washers that secure the generator drive disc to the engine flywheel. Turn bolts counter-clockwise with offset wrench to start, then use flexible shaft and socket assembly for removal of bolts.
5. Remove the twelve 3/8 inch hex head cap screws and washers that secure generator frame to engine flywheel housing.
6. Remove the four 5/8 inch bolts that secure the generator mounting feet to the shock mount bracket, then remove generator.

b. Installing the Generator

NOTE

For torque values refer to paragraph 4.7.

The generator is a single bearing type, which means the shaft end of the rotor floats. Before installing the generator, rotate shaft and check if bearing rotates.

1. Brush anti-seize lubricant (lube-plate) on the face of flywheel.
2. Move generator into position and line up with the holes on housing and flywheel. If required, turn

crankshaft to align threaded holes in flywheel with generator drive disc mounting holes.

CAUTION

The rotor should not be pulled out from the alternator more than 0.75 inches. Damage to the bearing and windings may result.

3. Start the 8mm bolts (by hand) through the disc plate and into the flywheel. Once alignment is made torque bolts (six).


4. Secure two of the housing bolts (3/8 inch) on the top and bottom of the generator housing to draw the mating flanges together.
5. Secure remaining bolts and washers (3/8 inch) and torque bolts (twelve) in a staggered pattern.
6. Install and torque generator mounting bracket bolts (5/8 inch). Install screen cover, generator exhaust baffle, power leads, ground wiring and generator cover. Install new gasket when installing generator connection box cover.

4.6 GENERAL GENERATOR SET MAINTENANCE

4.6.1 Maintenance Of Painted Surfaces

The unit is protected against the corrosive atmosphere in which it normally operates by a special paint system. However, should the paint system be damaged, the base metal can corrode. If the paint system is scratched or damaged, do the following:

- a. Clean area to bare metal using a wire brush, emery paper or equivalent cleaning method.
- b. Immediately following cleaning, spray or brush on a zinc rich primer.
- c. After the primer has dried, spray or brush on finish coat of paint to match original unit color.

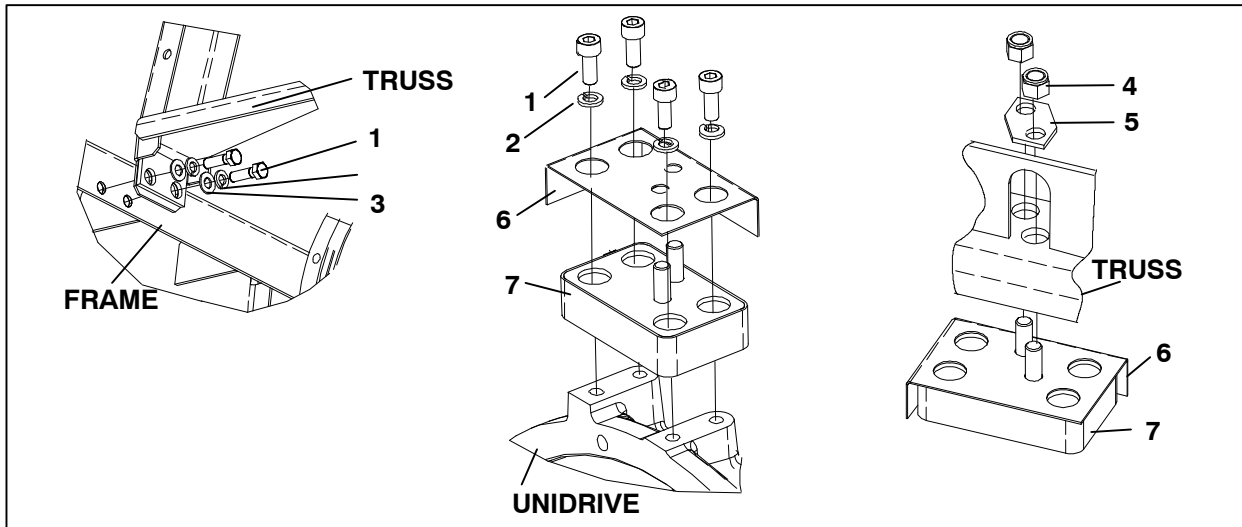

- | | |
|----------------|----------------|
| 1. Bolt | 5. Nutplate |
| 2. Lock Washer | 6. Heat Shield |
| 3. Flat Washer | 7. Isolator |
| 4. Locknut | |

Figure 4-9. Truss and Isolator

4.6.2 Check and Replace Isolators/ Shockmounts

a. Replacement Criteria



Continued operation with failed shock mounts may result in engine or generator damage.

When a shockmount has been cut, split, abraded or has flared due to normal deterioration, it must be replaced. Damage to the mounts may not be visible when installed and under load from the component. To correctly inspect shockmounts, they must be removed.


b. Engine Isolator/Shockmount Replacement

1. Use the two lift eyes to lift and support the engine.
2. Remove truss, unidrive isolator and all hardware as show in Figure 4-9, if equipped.
3. Remove all hardware as shown in Figure 4-10.
4. Raise the engine just enough to remove the shockmounts (Figure 4-10 item 4).
5. Install new shockmounts.

NOTE

For torque values refer to paragraph 4.7.

6. Lower the engine enough to assemble hardware as shown and torque per paragraph 4.7.
7. Remove chains from the lift eyes.

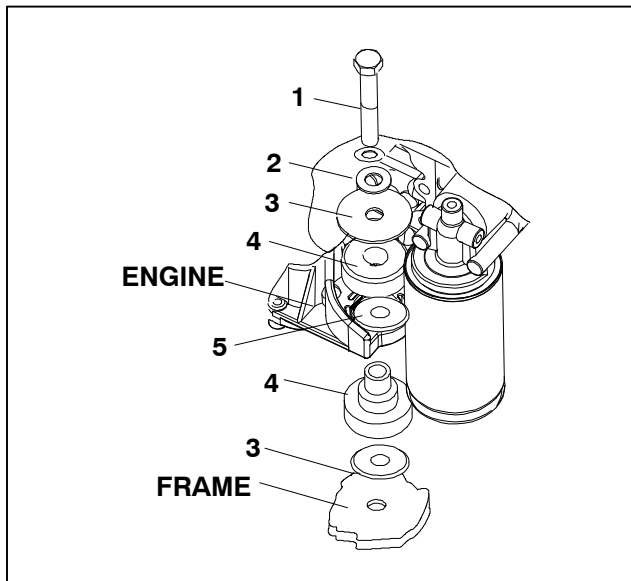


- | | |
|--------------------|----------------|
| 1. Bolt | 4. Shock Mount |
| 2. Lock Washer | 5. Flat Washer |
| 3. Snubbing Washer | |

Figure 4-10. Engine Shockmounts

c. Generator Shockmount Replacement

1. Use the two lift eyes to lift and support the engine.
2. Remove shockmount hardware.
3. Raise the generator just enough to remove the shockmounts (Figure 4-11 item 7).
4. Install new shockmounts.
5. Lower the engine enough to assemble hardware as shown and torque. Refer to paragraph 4.7 for torque values.
6. Remove chains from the lift eyes.

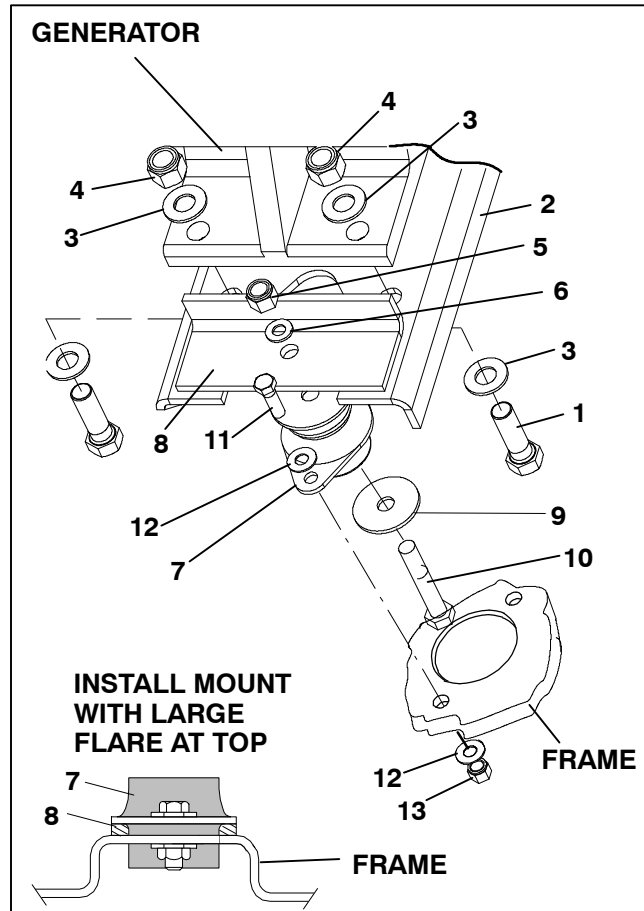

- | | |
|----------------------|-----------------------|
| 1. Screw (5/8) | 8. Support Plate |
| 2. Mounting Base | 9. Snubbing Washer |
| 3. Flat Washer (5/8) | 10. Screw (1/2) |
| 4. Locknut (5/8) | 11. Screw (3/8) |
| 5. Locknut (1/2) | 12. Flat Washer (3/8) |
| 6. Flat Washer (1/2) | 13. Locknut (3/8) |
| 7. Shockmount | |

Figure 4-11. Generator Shockmounts

4.7 UNIDRIVE TORQUE REQUIREMENTS

Extensive damage may occur if the proper hardware is not used and/or proper procedures are not followed when working with the unidrive assembly. Periodic inspection of hardware and bolt torque is recommended to ensure the integrity of the unidrive.

Torque value and hardware requirements for unidrive assembly are provided in Figure 4-12.

NOTES

SST is an abbreviation for 300 Series Corrosion Resistant Steel.

Loctite #242 or an equivalent product should be used on ALL hardware shown on this page.

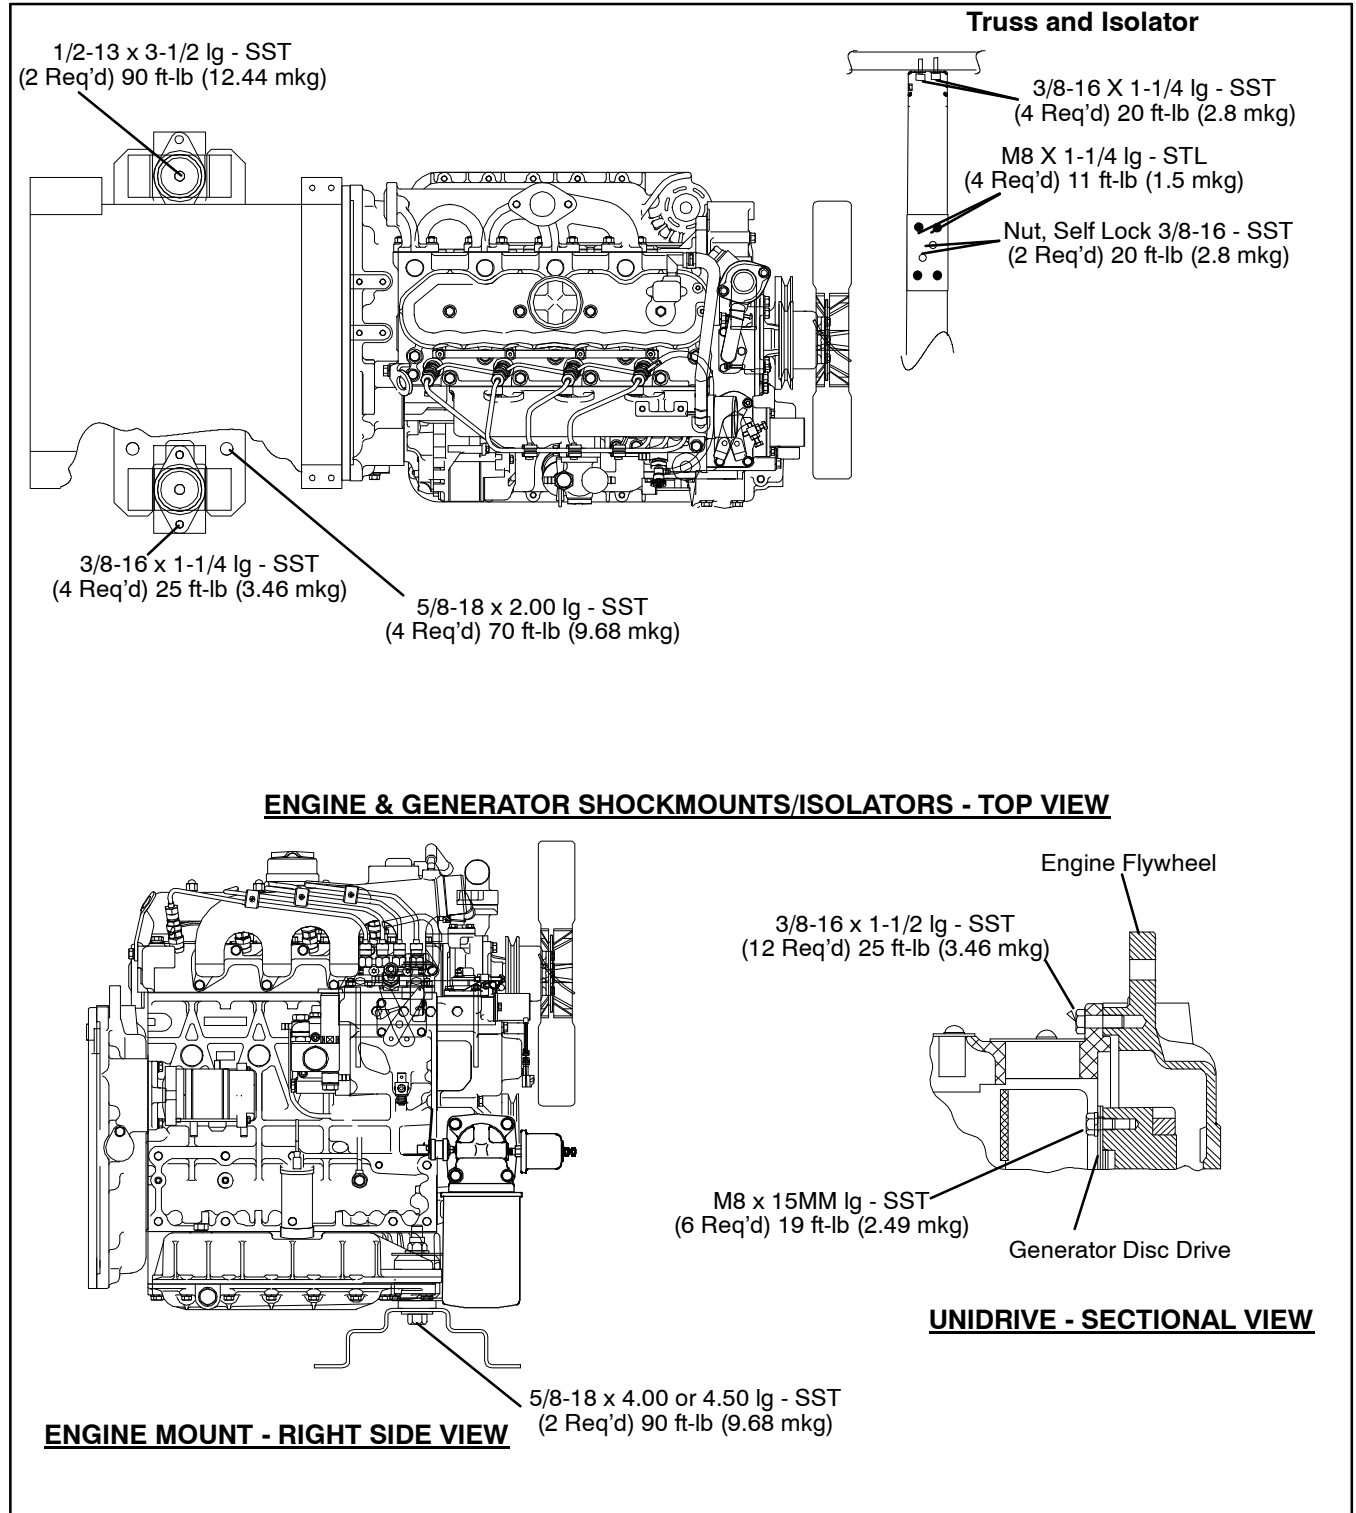


Figure 4-12. Unidrive Torque Requirements

SECTION 5

SCHEMATICS

5.1 INTRODUCTION

This section contains the 12-volt DC control circuit schematics, the 460 volt alternating current generator schematic and the 230 volt alternating current generator schematic. To identify the schematics applicable to your PID number refer to Table 1-1.


LINE	SYMBOL	LEGEND
	— - - —	OPTIONAL
3,5,8,9,14		ENGINE GROUND
7,5		CHASSIS GROUND
2	A -	AMMETER
12	BC -	BATTERY CHARGER
2	BAT -	BATTERY
1,4,8,13	CB -	CIRCUIT BREAKER
5	CC -	COIL COMMANDER
4,12	D -	DIODE
8	FH -	FUEL HEATER
8	FHT -	FUEL HEATER THERMOSTAT
6	FS -	FUEL SOLENOID
6	FSA -	FUEL SOLENOID HOLD
6	FSB -	FUEL SOLENOID PULL
2,3,9	G -	GENERATOR
3	GP -	GLOW PLUG
4	GPS -	GLOW PLUG SWITCH
5	HWT -	HIGH WATER TEMP. SWITCH
7,8	IGN -	IGNITION SWITCH
5	LOP -	LOW OIL PRESS. SWITCH
9	OPG -	OIL PRESSURE GAUGE
9	OPS -	OIL PRESSURE SENDER
2,3,9,11	R1 -	RECEPTACLE
12,13	R2 -	RECEPTACLE
4,7	S -	SAFETY RELAY
2	SM -	STARTER MOTOR
2	SS -	STARTER SOLENOID
6	TC -	TIMER CIRCUIT
11	TT -	TIME METER
10	WTG -	WATER TEMP. GAUGE
10	WTS -	WATER TEMP. SENDER

Based On Drawings 62-10934-00 Rev- 62-10936-00 Rev -62-10956-00 Rev- 62-11279-00 Rev- 62-11294-00 Rev-

Figure 5-1. Schematic Diagram - Legend

(Applies to Figures 5-2 thru 5-4)


12VDC CONTROL CIRCUIT

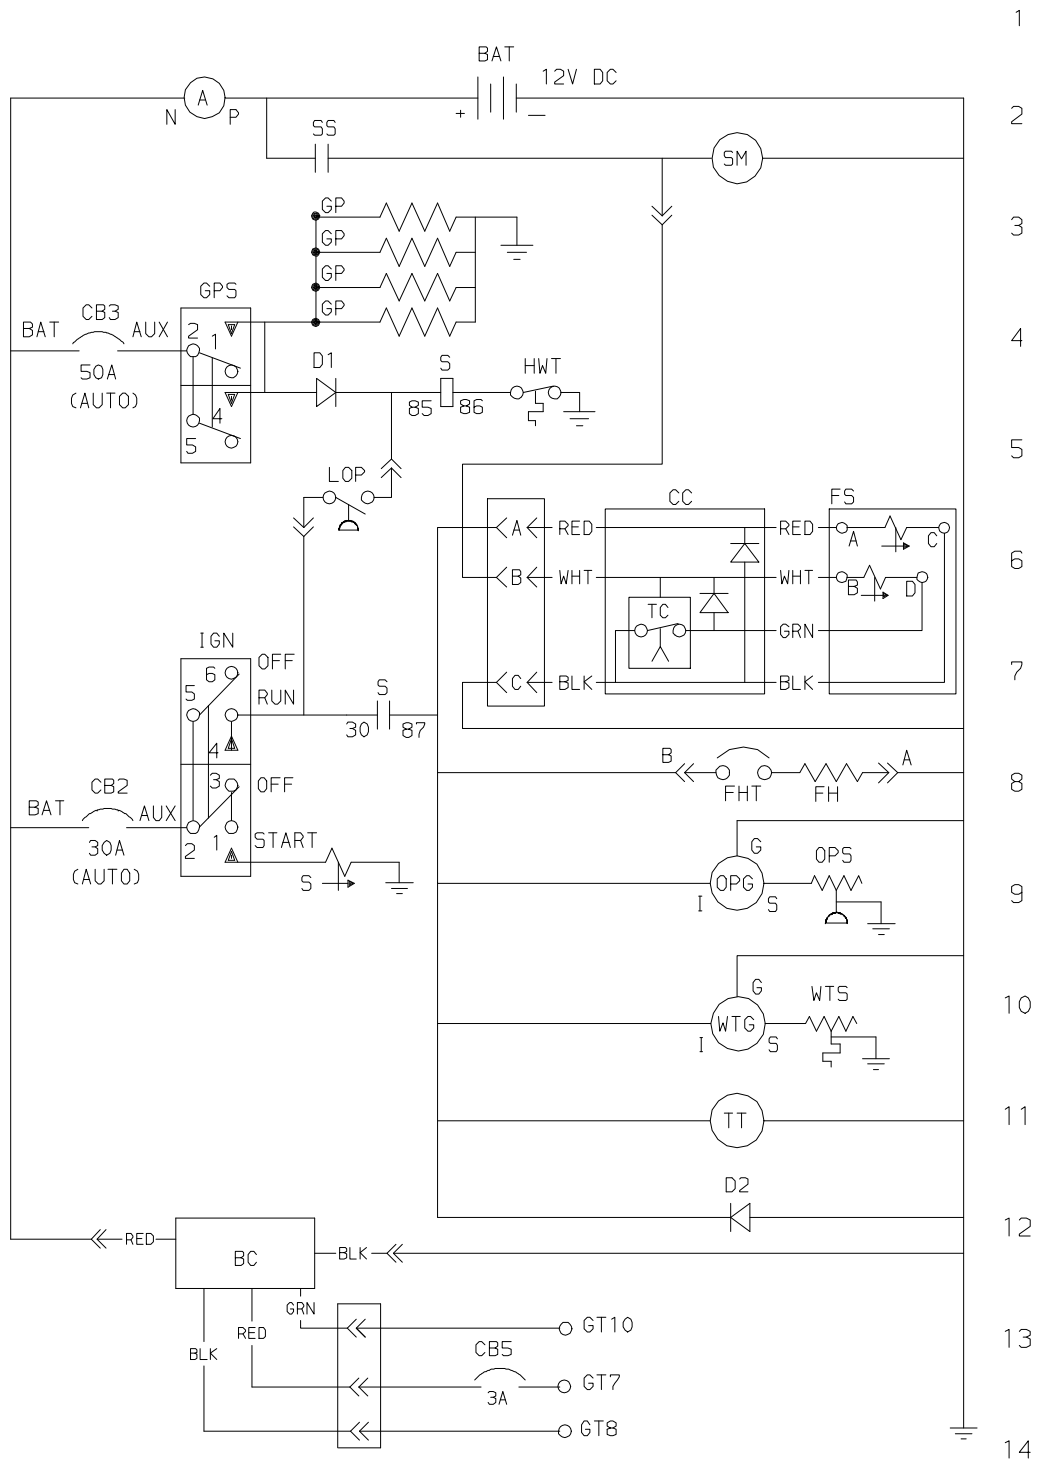

Based On Drawings 62-10934-00 Rev- 62-10936-00 Rev -62-10956-00 Rev- 62-11279-00 Rev- 62-11294-00 Rev-


Figure 5-2. Schematic Diagram
(For Applicability, Refer to Table 1-1)

460V

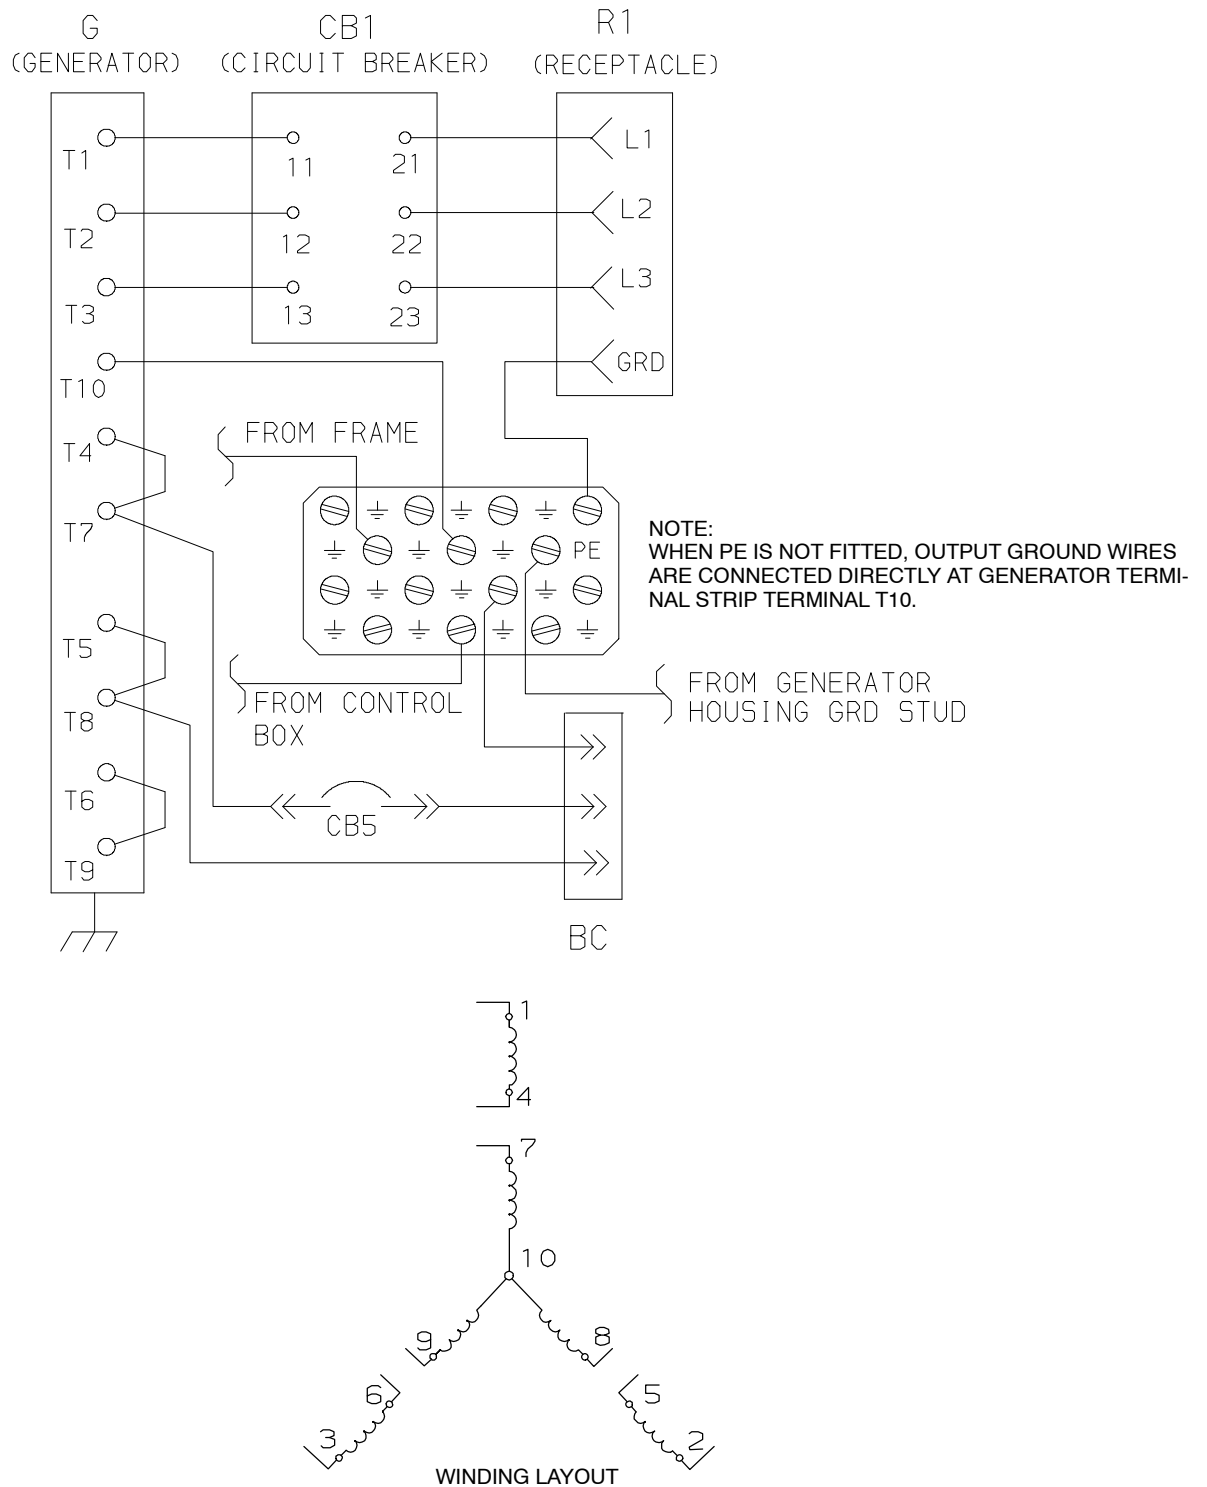


 
Based On Drawings 62-10934-00 Rev- 62-10936-00 Rev -62-10956-00 Rev- 62-11279-00 Rev- 62-11294-00 Rev-

 Figure 5-3. Schematic Diagram 460 Volt Alternating Current Generator
(For Applicability, Refer to Table 1-1)

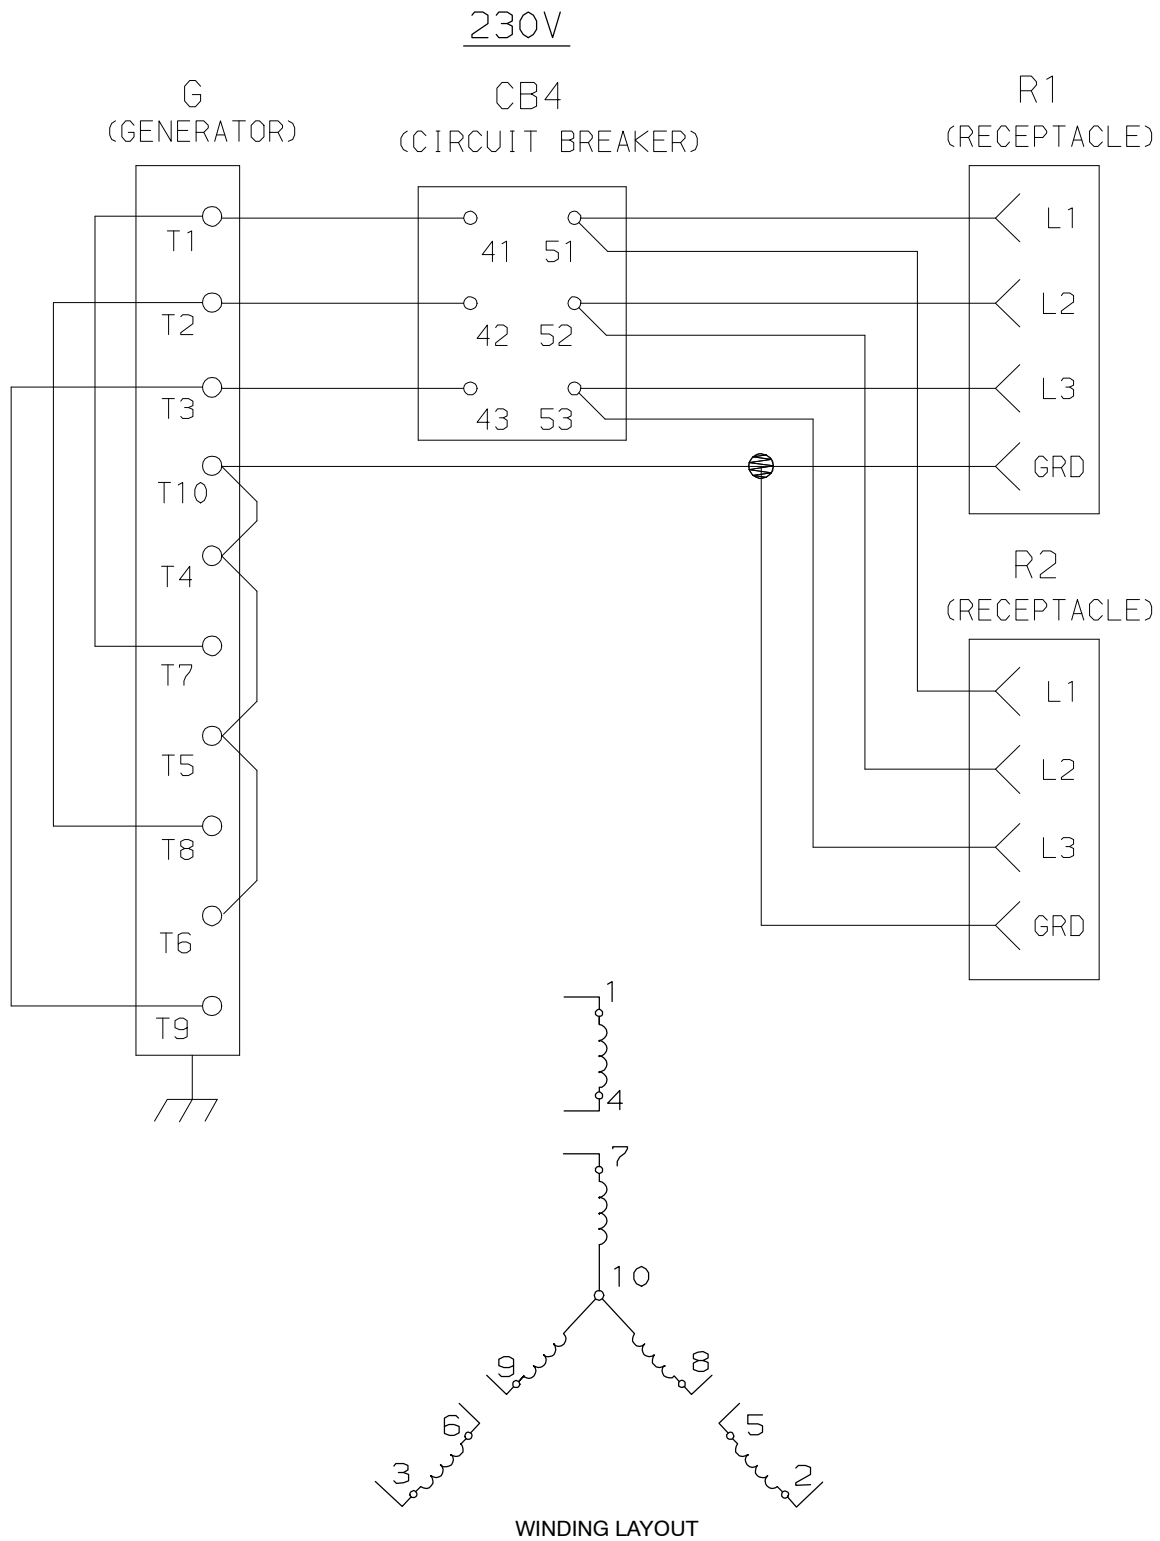

Based On Drawings 62-10934-00 Rev- 62-10936-00 Rev -62-10956-00 Rev- 62-11279-00 Rev- 62-11294-00 Rev-


Figure 5-4. Schematic Diagram 230 Volt Alternating Current Generator
(For Applicability, Refer to Table 1-1)

LINE	SYMBOL	LEGEND
2,7,11,12,17		ENGINE GROUND
23		CHASSIS GROUND
1	A -	AMMETER
2	CC -	COIL COMMANDER
16,22	BC -	BATTERY CHARGER
1	BAT -	BATTERY
2,6,18	CB -	CIRCUIT BREAKER
7	CM -	CONTROL MODULE
13	D -	DIODE
9	ESA -	ENGINE START ALARM
8	ESL -	ENGINE START LIGHT
9	ESS -	ENGINE SPEED SENSOR
6	F -	FUSE
10	FH -	FUEL HEATER
3	FS -	FUEL SOLENOID
3	FSA -	FUEL SOLENOID HOLD
3	FSB -	FUEL SOLENOID PULL
12	TT -	TIME METER
12	WTG -	WATER TEMP. GAUGE
12	WTS -	WATER TEMP. SENDER
18	G -	GENERATOR
2	GP -	GLOW PLUG
2	GR -	GLOW PLUG RELAY
7	HWT -	HIGH WATER TEMP. SWITCH
4	IGN -	IGNITION SWITCH
6	LOP -	LOW OIL PRESS. SWITCH
11	OPG -	OIL PRESSURE GAUGE
11	OPS -	OIL PRESSURE SENDER
18	R1 -	RECEPTACLE
5,9	S -	SAFETY RELAY
2	SM -	STARTER MOTOR
10	SR -	STARTER RELAY
2	SS -	STARTER SOLENOID
15	LCS -	LOW COOLENT SENSOR
7	LR -	LOW COOLANT RELAY

Based On Drawing 62-11143-00 Rev -

Figure 5-5. Schematic Diagram - Legend
 (Applies to Figures 5-6, 5-7)



12VDC CONTROL CIRCUIT

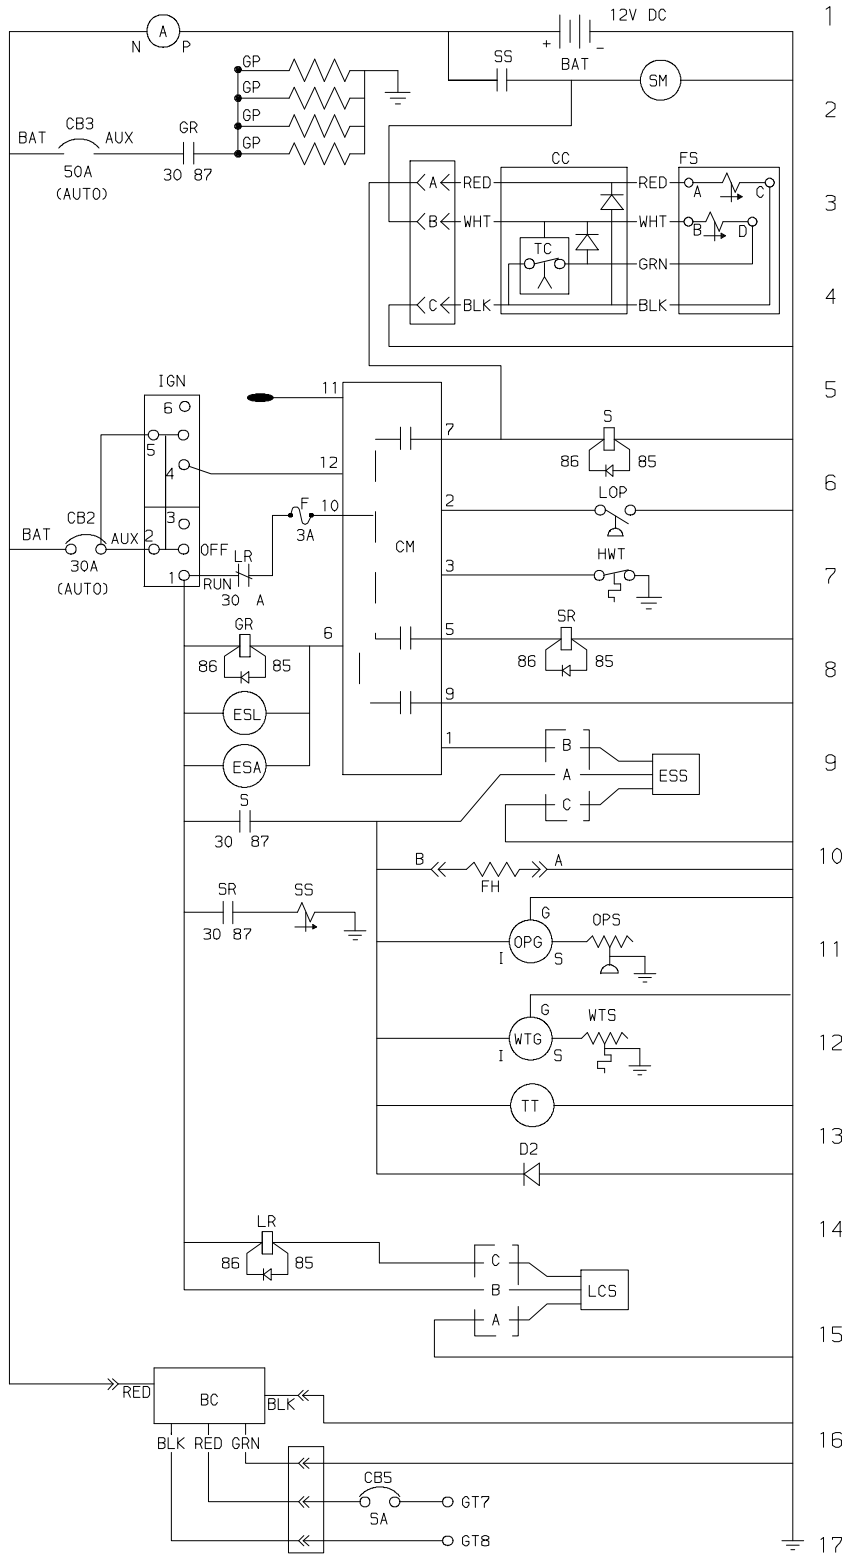

Based On Drawings 62-11143-00 Rev-

Figure 5-6. Schematic Diagram
(For Applicability, Refer to Table 1-1)

460V

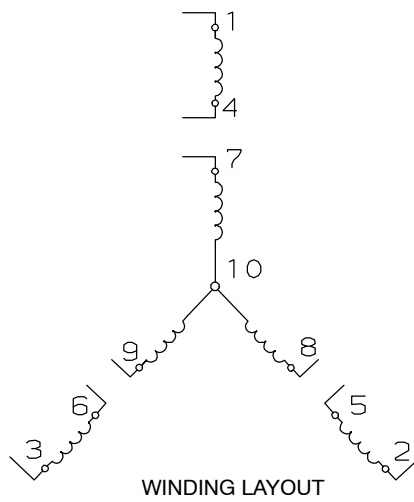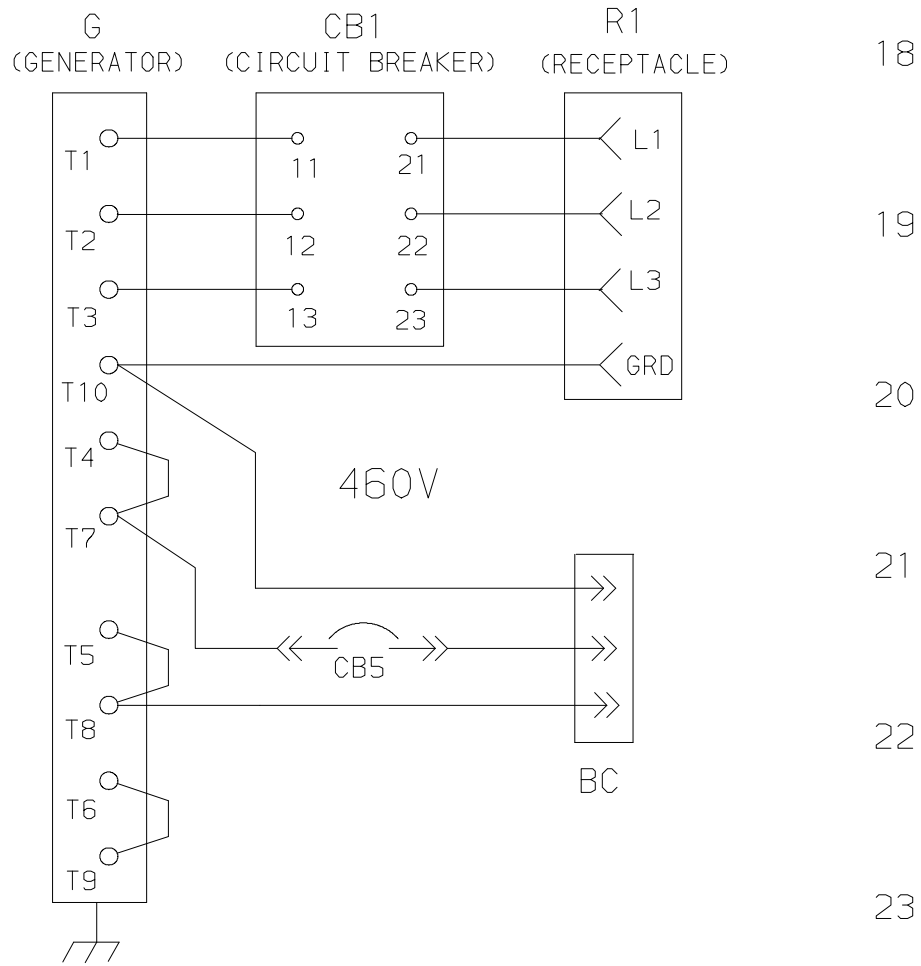

Based On Drawings 62-11143-00 Rev-

Figure 5-7. Schematic Diagram 460 Volt Alternating Current Generator
(For Applicability, Refer to Table 1-1)

INDEX

A

ALTERNATING CURRENT GENERATOR, 1-6, 4-6
Ammeter, 1-8
Auto Restart Preset Values, 1-10
Auto Restart Sequencing, 1-10
Auto Restart Troubleshooting, 3-5

B

Battery Charger Troubleshooting, 3-3
BATTERY CHARGING, 1-7
BATTERY SERVICE, 4-1
Bearing Replacement, 4-8

C

CONTROL CIRCUIT OPERATION, 2-4
Control Panel, 1-7
Cooling System, 4-1

D

DESCRIPTION, 1-1
Diode Testing, 4-8

E

ENGINE, 1-6
Engine Air Cleaner, 4-5
Engine Air System, 1-6
Engine Crankcase Breather, 4-6
ENGINE SCREW THREADS, 1-6
ENGINE SERVICE, 4-1
Engine Speed, 4-5
Engine Speed Sensor Service, 4-5
Engine Starting Circuit Troubleshooting, 3-2
Engine Troubleshooting, 3-1

F

FIRST AID, Safety-i
Fuel Filter, 4-1
Fuel Pump, 4-1
Fuel System, 1-6, 4-1

G

Gauges and Senders, 1-7
GENERAL GENERATOR SET MAINTENANCE, 4-9
Generator Repair, 4-7
GENERATOR SET INSTALLATION AND REMOVAL,
2-1, 2-2
Generator Test Procedures, 4-7
Generator Troubleshooting, 3-4
Glow Plug Switch, 1-8
Glow Plugs, 4-6

H

HAZARD LABEL IDENTIFICATION, Safety-i

I

Ignition Switch, 1-8
Insulation Testing, 4-7
INTRODUCTION , 1-1

L

Low Coolant Sensor, 1-7
Low Coolant Sensor Service, 4-4
Lube Oil Filter, 1-6, 4-4

M

MAINTENANCE PRECAUTIONS, Safety-i
Manual Switches, 1-8
Meters, 1-8
Model Chart, 1-2

INDEX (Continued)

O

OPERATING CONTROLS AND INSTRUMENTS, 1-7
OPERATING PRECAUTIONS, Safety-i
OPERATION, 2-1

P

Post-Start Inspection, 2-3
Pre-Start Inspection, 2-3
PREVENTIVE MAINTENANCE SCHEDULE, 4-1
Principle of Operation, 1-6

S

SAFETY DEVICES, 1-8
SAFETY NOTICES, Safety-i
SAFETY SUMMARY, Safety-i

SCHEMATICS, 5-1
SERVICE AND PREVENTIVE MAINTENANCE, 4-1
Shockmount Replacemen, 4-10
Shockmount Replacement, 4-10
Starter Motor Troubleshooting, 3-2
STARTING AND STOPPING, 2-3
Starting Instrutions, 2-3
Stopping Instructions, 2-3

T

TORQUE REQUIREMENTS, 4-11
Total Time Meter, 1-8
TROUBLESHOOTING, 3-1

V

V-belt, 4-4



A member of the United Technologies Corporation family. Stock symbol UTX
©2008 Carrier Corporation • Printed in U. S. A. 1008



Carrier

A United Technologies Company

Carrier Transicold Division,
Carrier Corporation
Container Products Group
P.O. Box 4805
Syracuse, N.Y. 13221 U.S.A

www.carrier.transicold.com